

nexus[®]
by Ghent


EASEL AND IDEAWALL ASSEMBLY INSTRUCTIONS

Models
NEX203ME-FR, NEX206MW-FR




Before discarding the packaging, inventory the components and fasteners. (Some may be taped to the foam packaging.)


FASTENERS AND HARDWARE

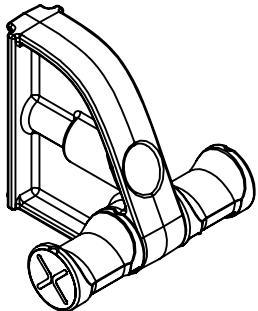


TABLET HANGER
2 EA.

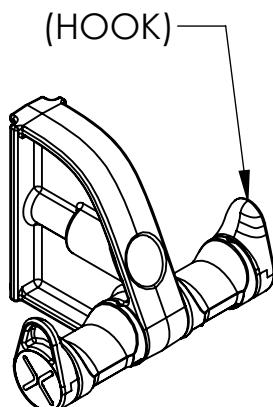


TABLET HANGER
(WITH HOOKS)
2 EA.

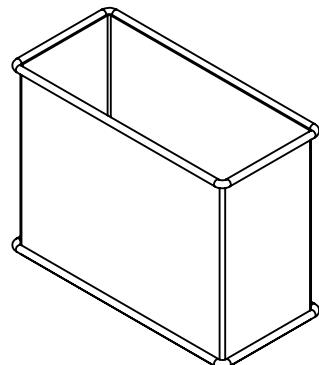


MARKER/ERASER
HOLDER
1 EA.

 

#10 X 2 1/2" PAN HEAD
MACHINE SCREW
5 EA.

 

#10 X 1 1/2" PAN HEAD
TAPPING SCREW
4 EA.

 

#12 X 1" PAN HEAD
MACHINE SCREW
8 EA.


RECOMMENDED TOOLS:

CORDLESS DRILL - 12 VOLT OR BETTER


#2 AND #3 PHILLIPS SCREWDRIVER BITS

SCREWDRIVER BIT EXTENDER


EASEL AND IDEAWALL COMPONENTS

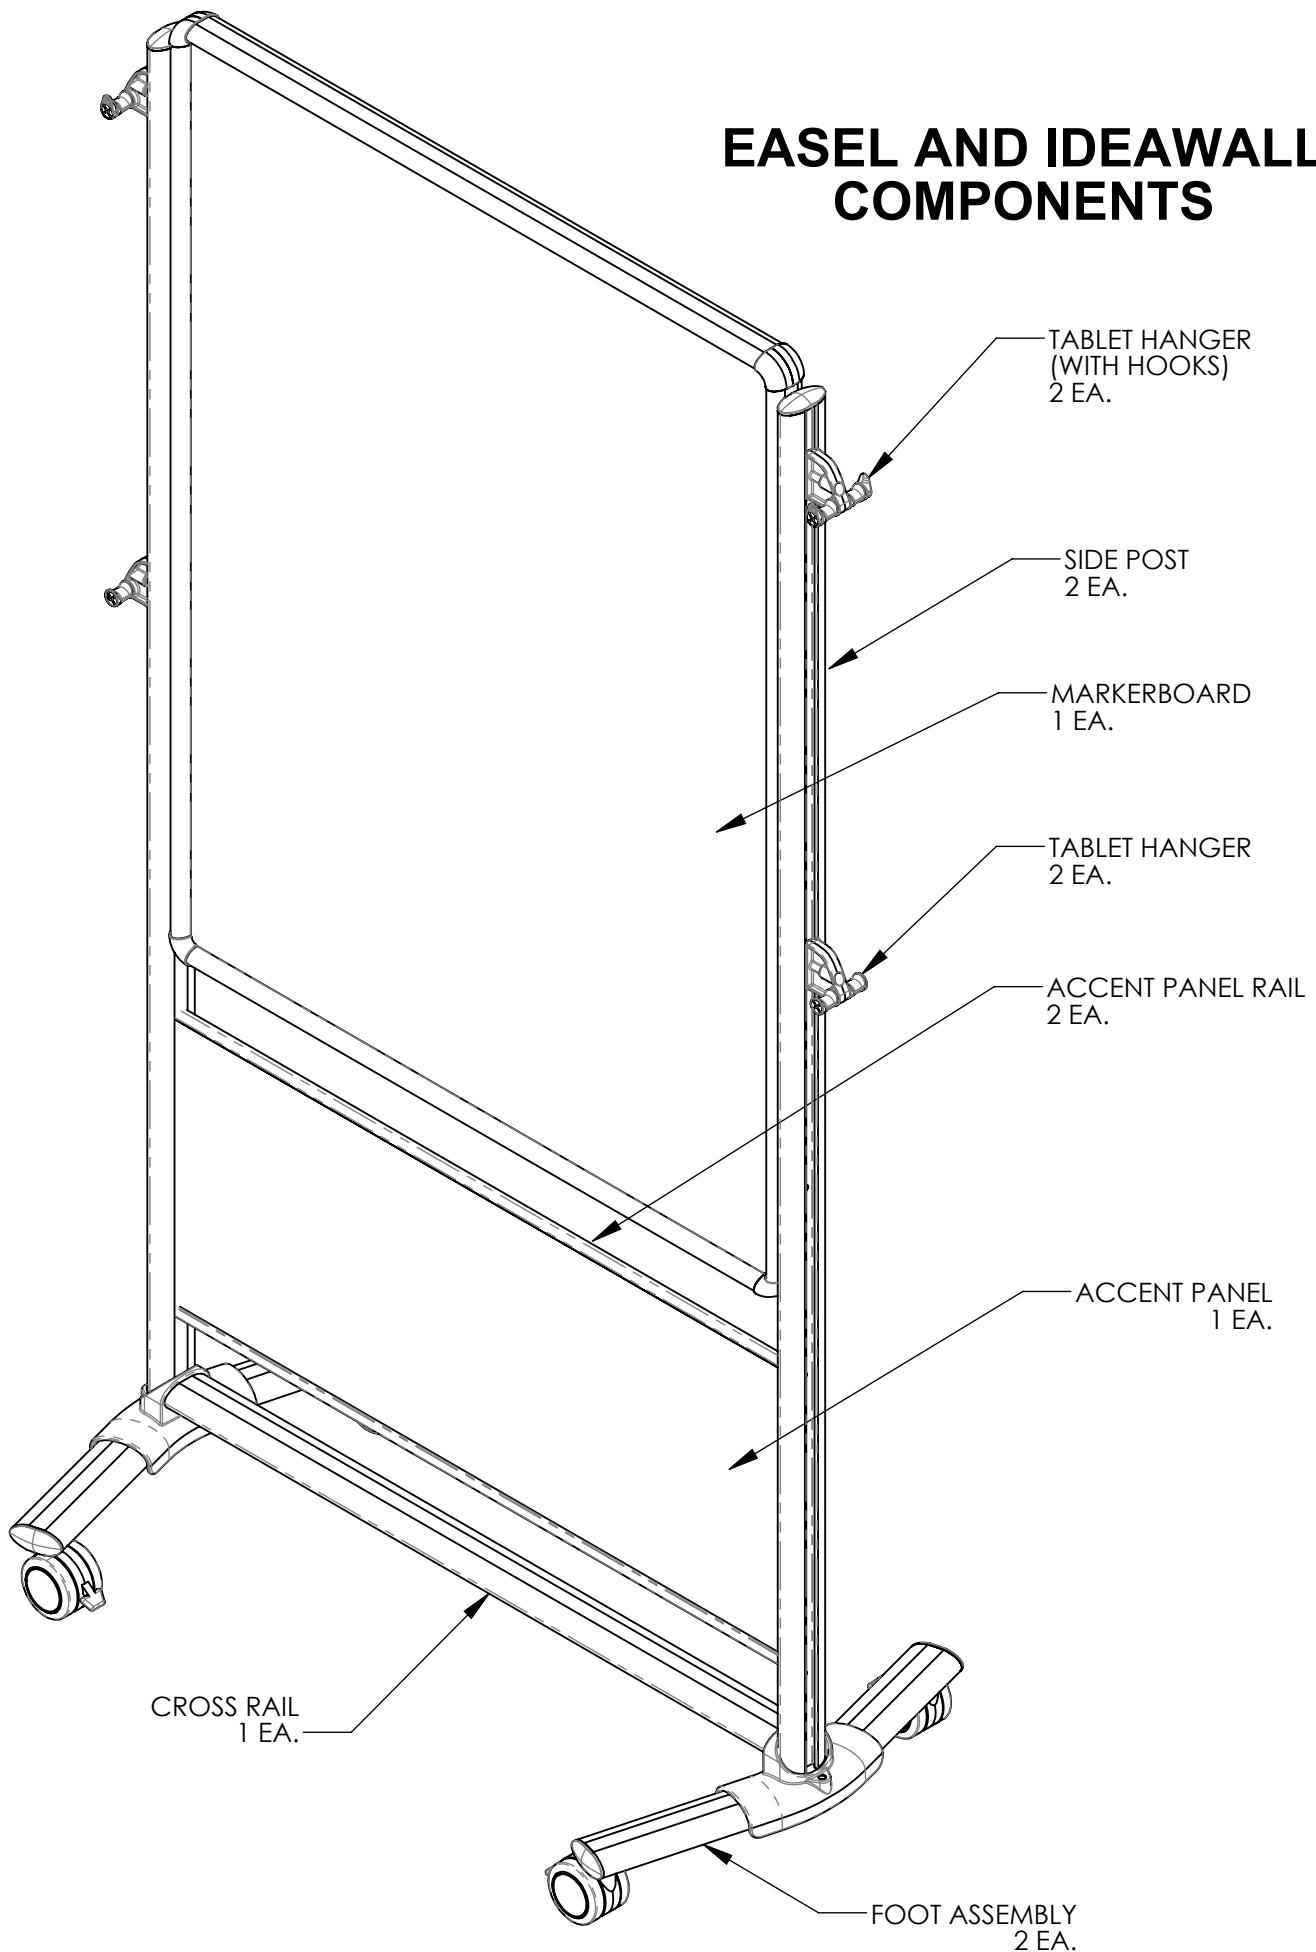


1. Insert the accent panel into the accent panel rails.

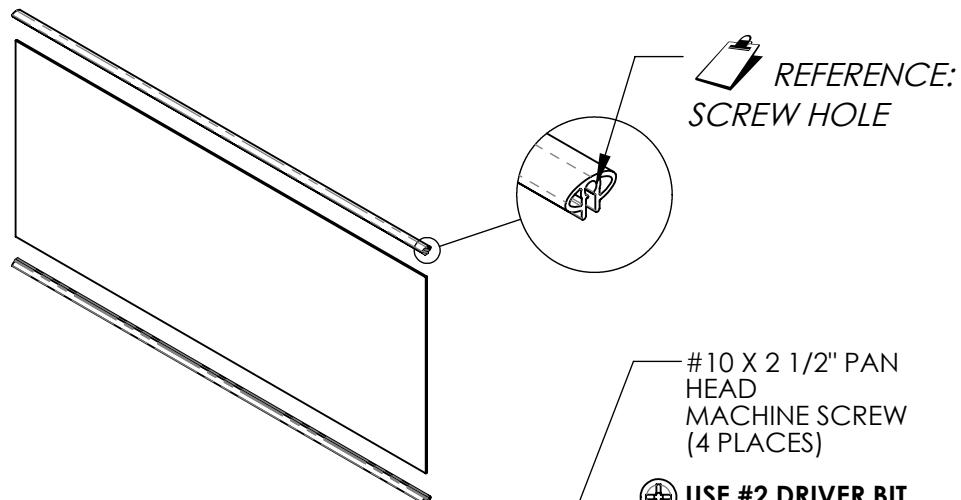


2. Loosely attach the markerboard and the accent panel, with rails, to the side posts as shown.

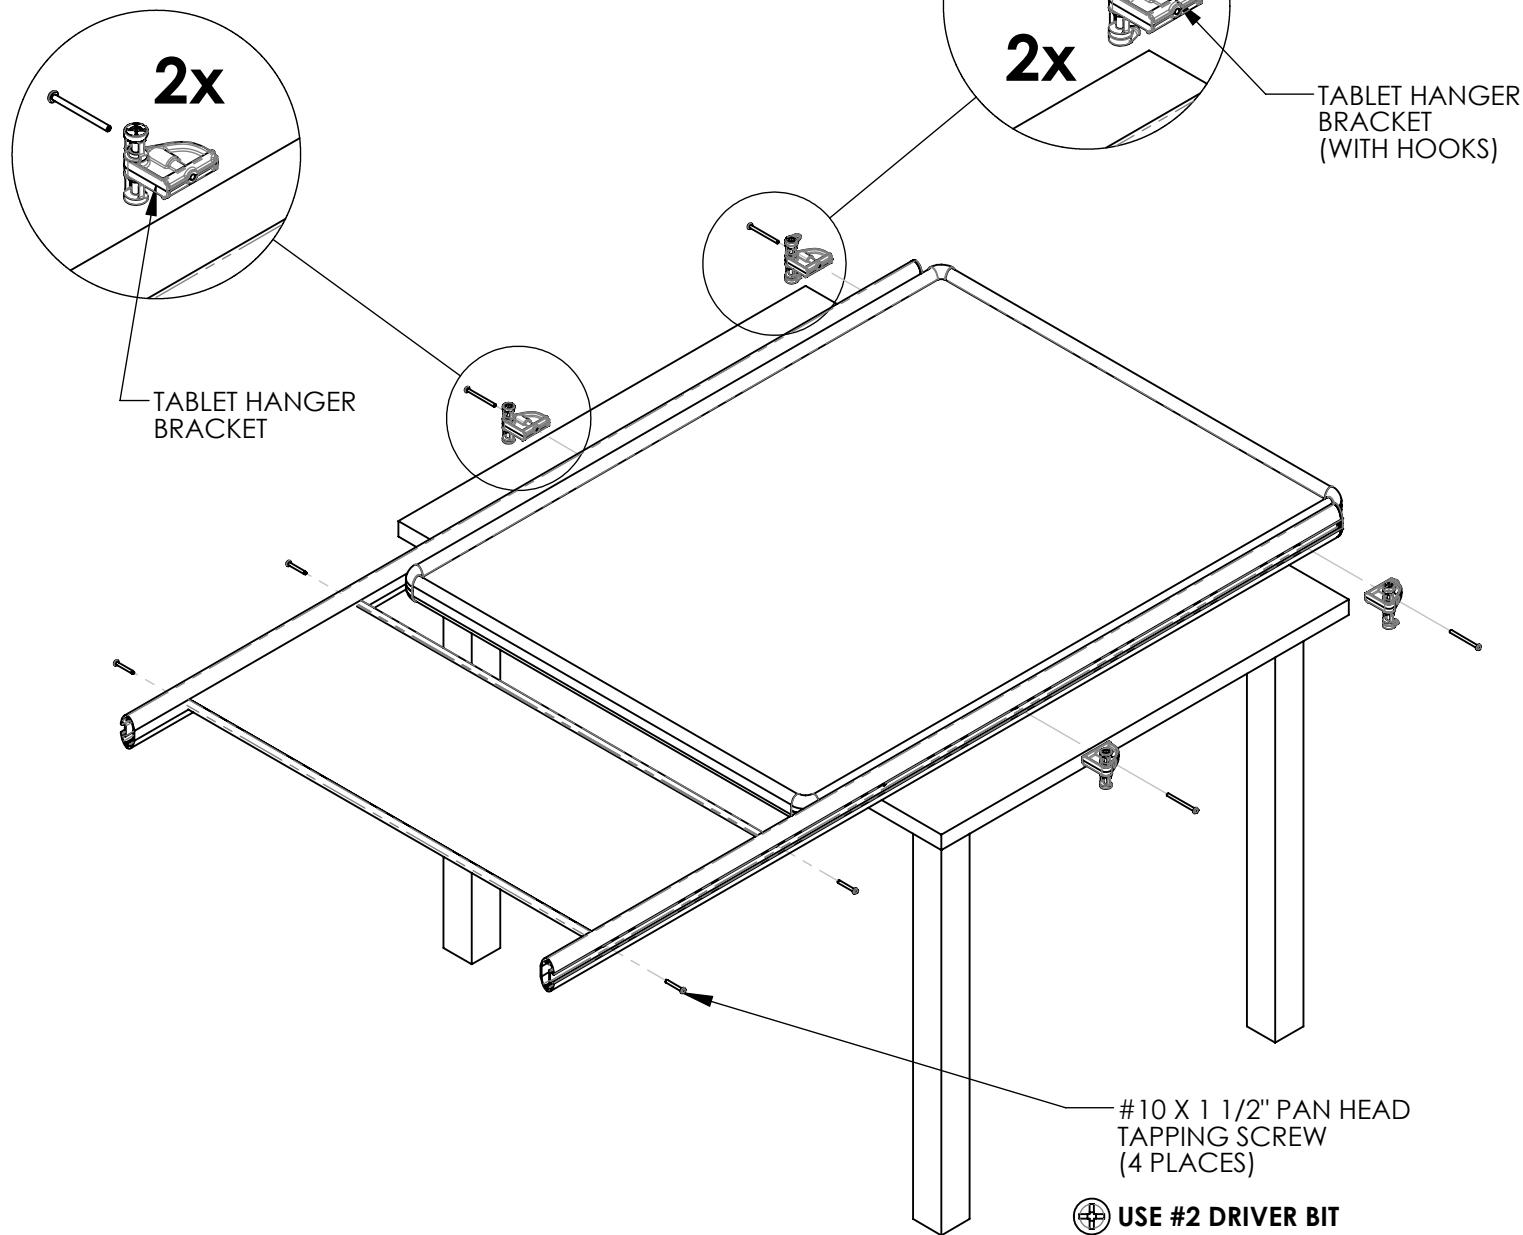

3. Attach the foot assemblies to the cross rail, as shown.

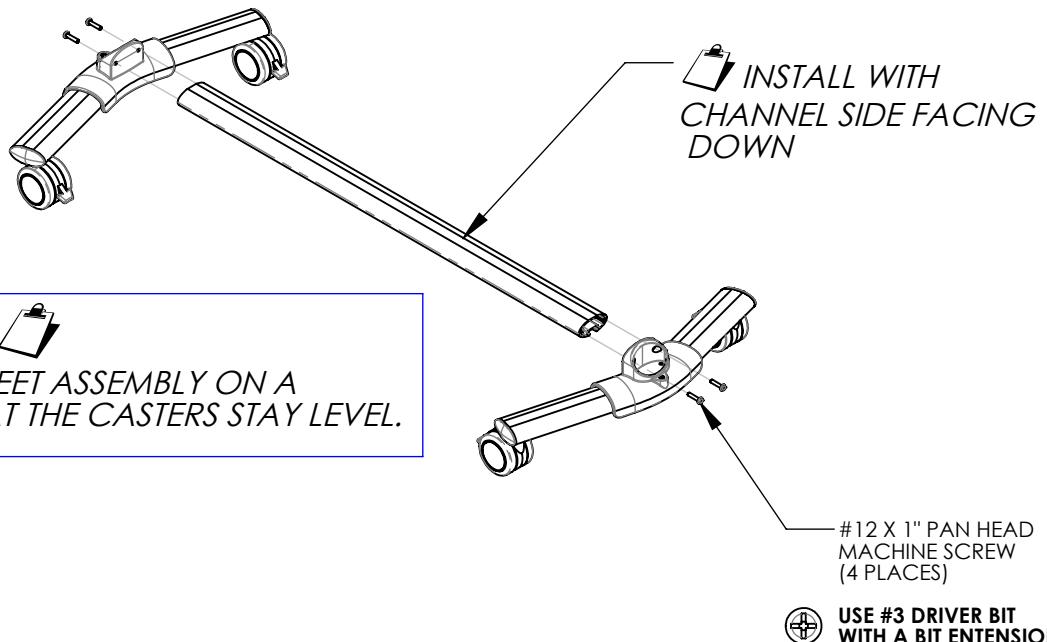

4. Attach the feet assembly to the side posts, as shown.

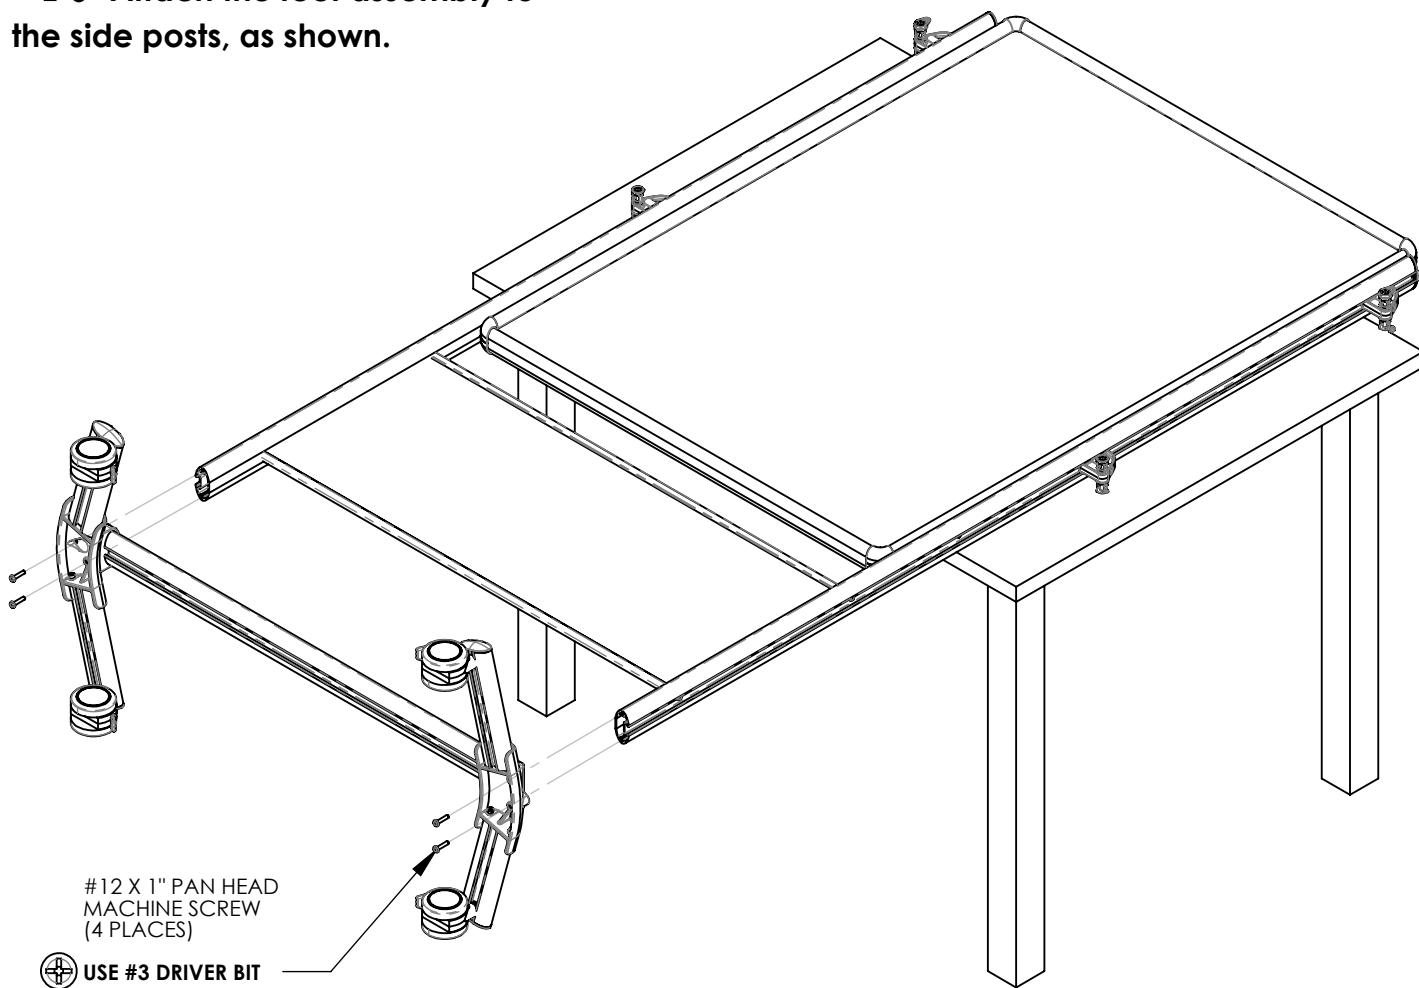

5. Tighten all screws to complete the assembly.