



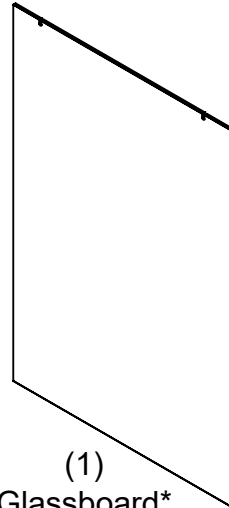
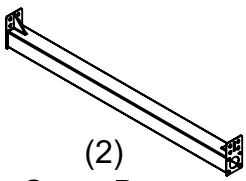
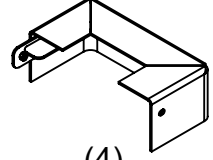
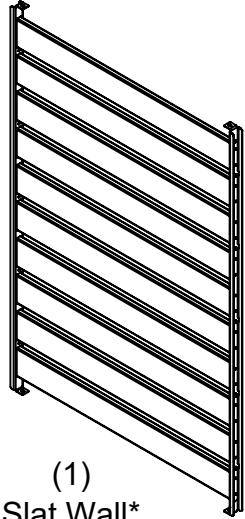
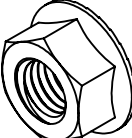
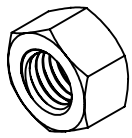
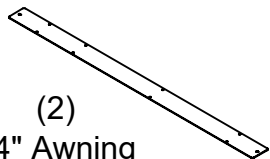
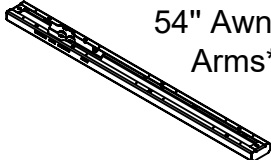


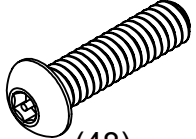

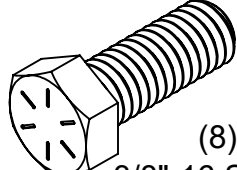
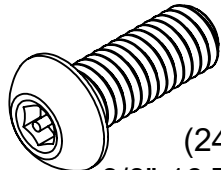

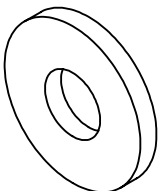
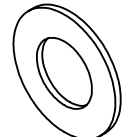





Preserve Outdoor Collaboration / PSV1

Installation Instructions




Before assembling the Preserve Unit, follow the mounting hardware instructions provided with the unit. These instructions are specific to the install location. For any questions contact your Ghent Representative by calling (800)-543-0550 or by emailing orders@gmicompanies.com

Step 1: Remove and unpack the Items and Hardware.


 (1) Side Post Left	 (1) Side Post Right	 (1) Glassboard*	 (2) Cross Base Assembly	 (4) Two Piece Cover	 (1) Slat Wall*
 (8-24) 3/4"- Flange Nut	 (8-24) 3/4"- Jam Nut	 (2) 54" Awning Cover Plate*	 (2) 54" Awning Arms*	 (4) Glass Clamp*	 (2) Rubber Glazing Block*
 (48) 1/4"-20 Tamper Resistant Screws	 (8) M5X0.8 Screw*	 (8) 3/8"-16 Socket Head Screw	 (24) 3/8"-16 Tamper Resistant Screws	 (1) Right Angle Screwdriver	
 (8) Black Fender Washer	 (20) 3/8" Washer	 (48) 1/4" Washer	 (28) 3/8" Split Lock Washer	 (48) 1/4" Split Lock Washer	 (1) Thread Locking Adhesive
					 (1) Waterproof Caulk

*Depending on Material Selection

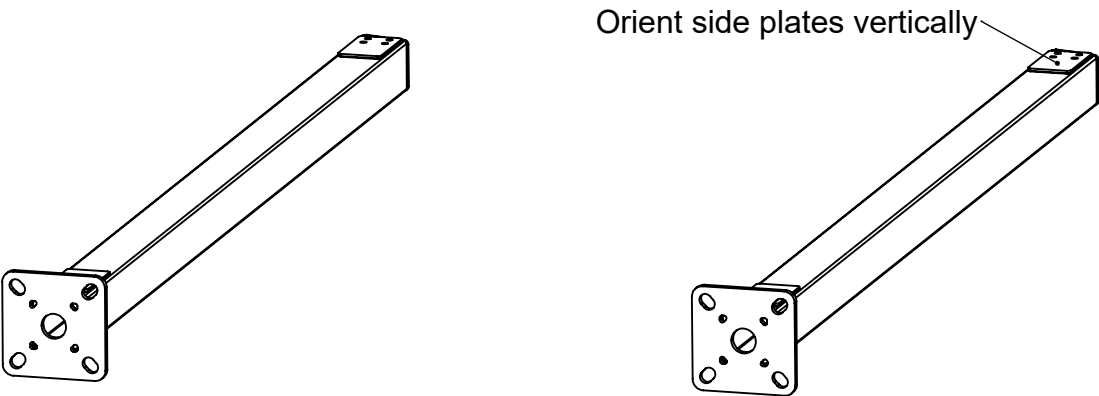
Step 2: Gently rest the Side Posts onto a clean, dry surface as shown below.



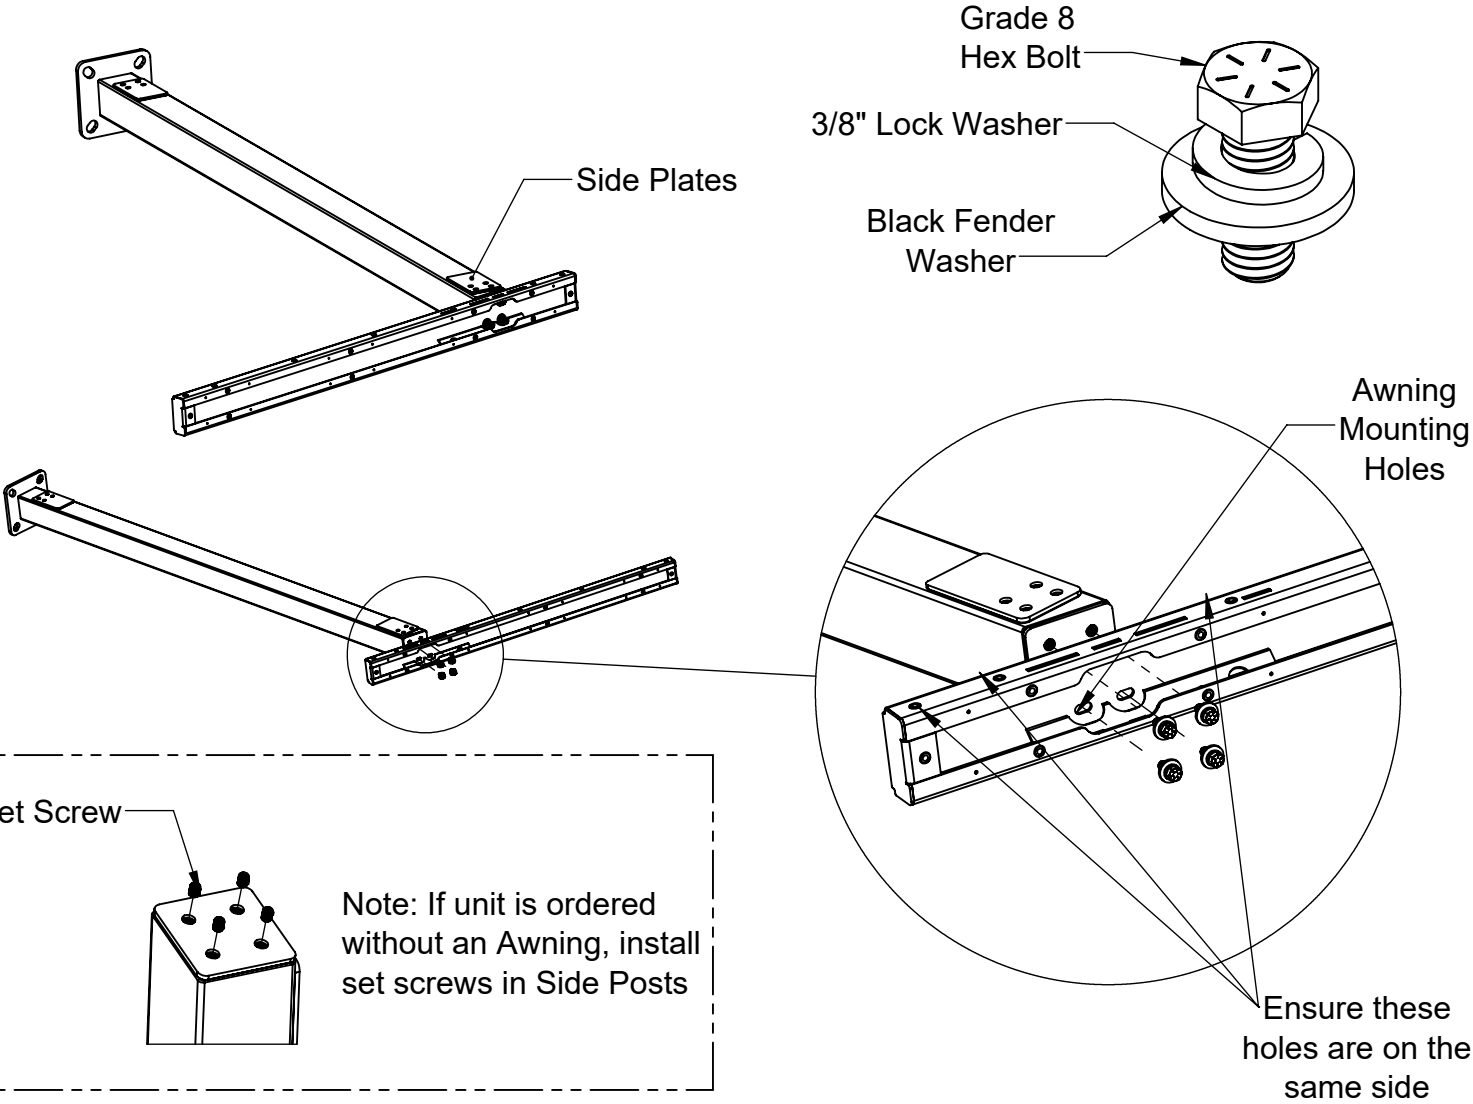
Step 3: Attach the Awning Arms onto the Side Posts as shown. Ensure that the Awning Mount holes and the Side Plates are oriented vertically.



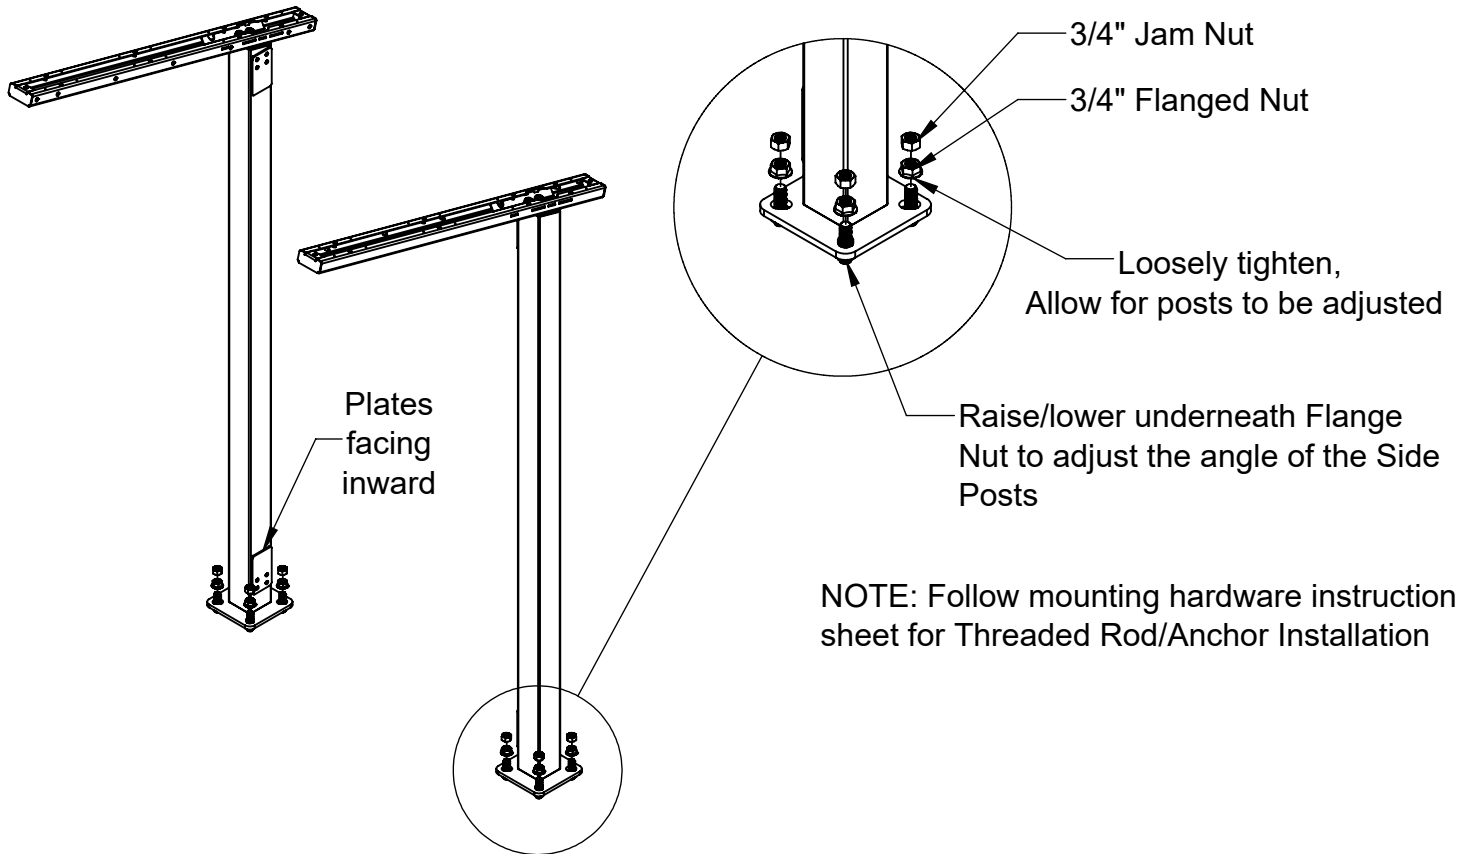
Step 4: Loosely mount the Side Posts onto the Threaded Rod / Anchors. Ensure the Side Plates are facing inwards.



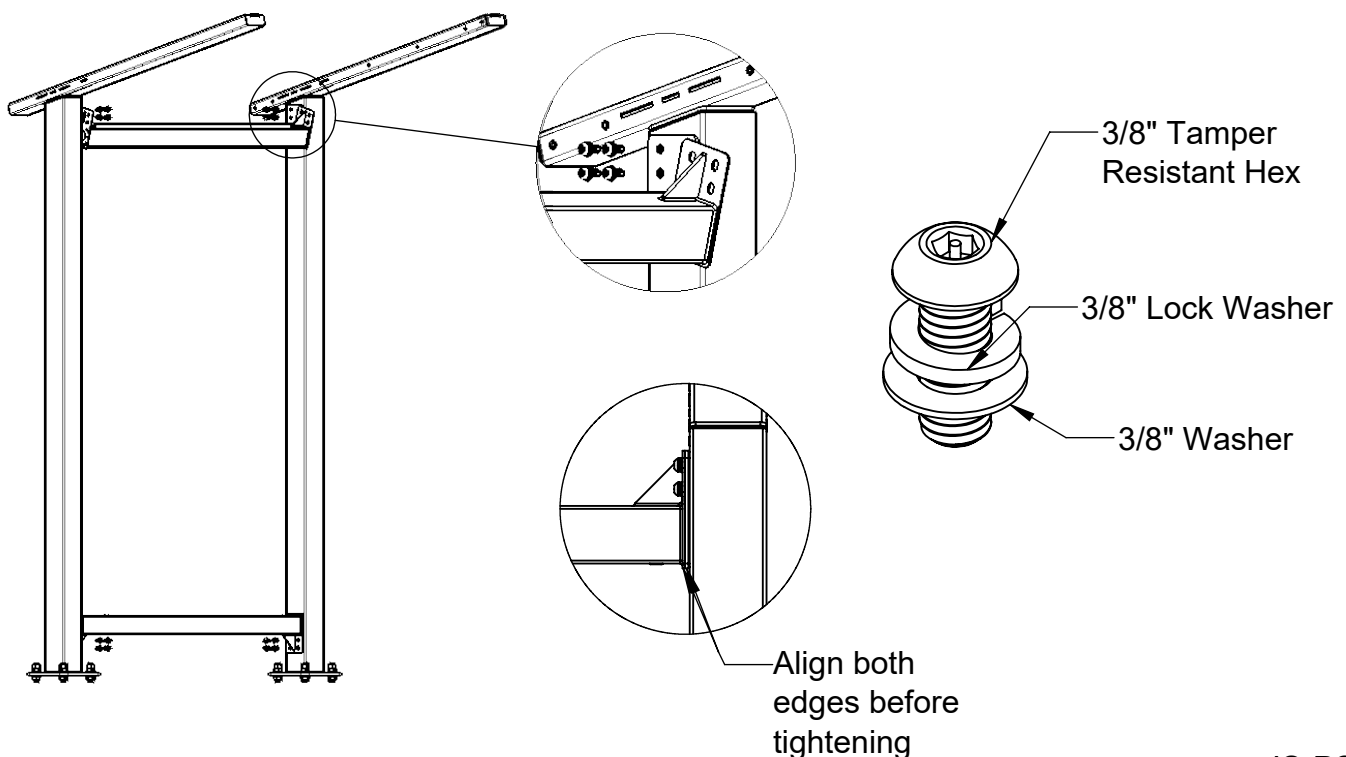
Step 5: Add the Crossbraces as shown below. Use the provided Tamper Resistant Hex bit and tool. After tightening, fully tighten 3/4" Nuts on Side Posts



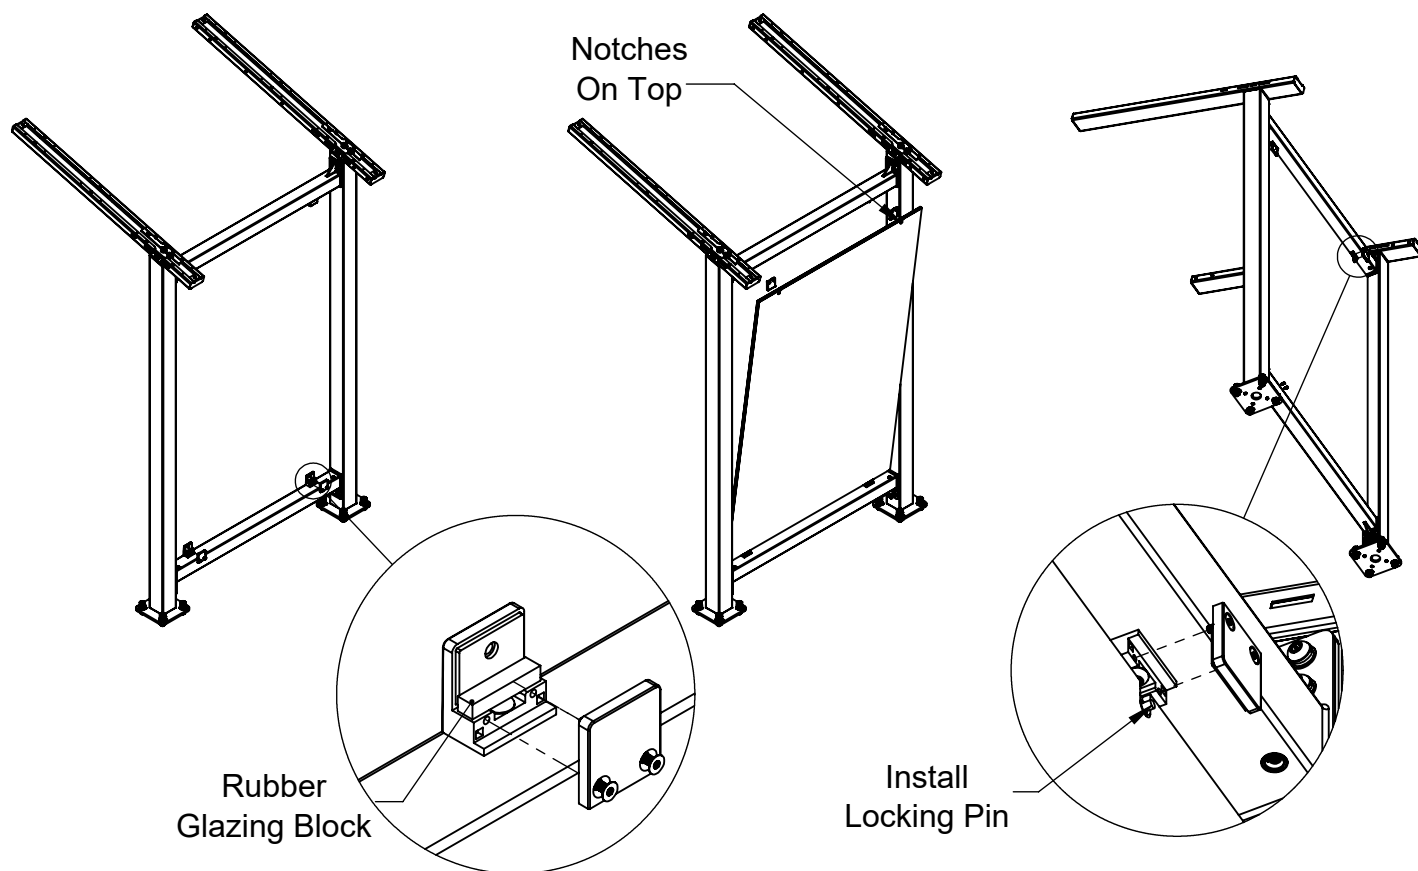
Step 6A: Install Glass if applicable. Mount Glass Clamps as shown on inner Crossbrace holes. Then install rubber glazing blocks and mount the Glassboard. Finally add the lock pins.



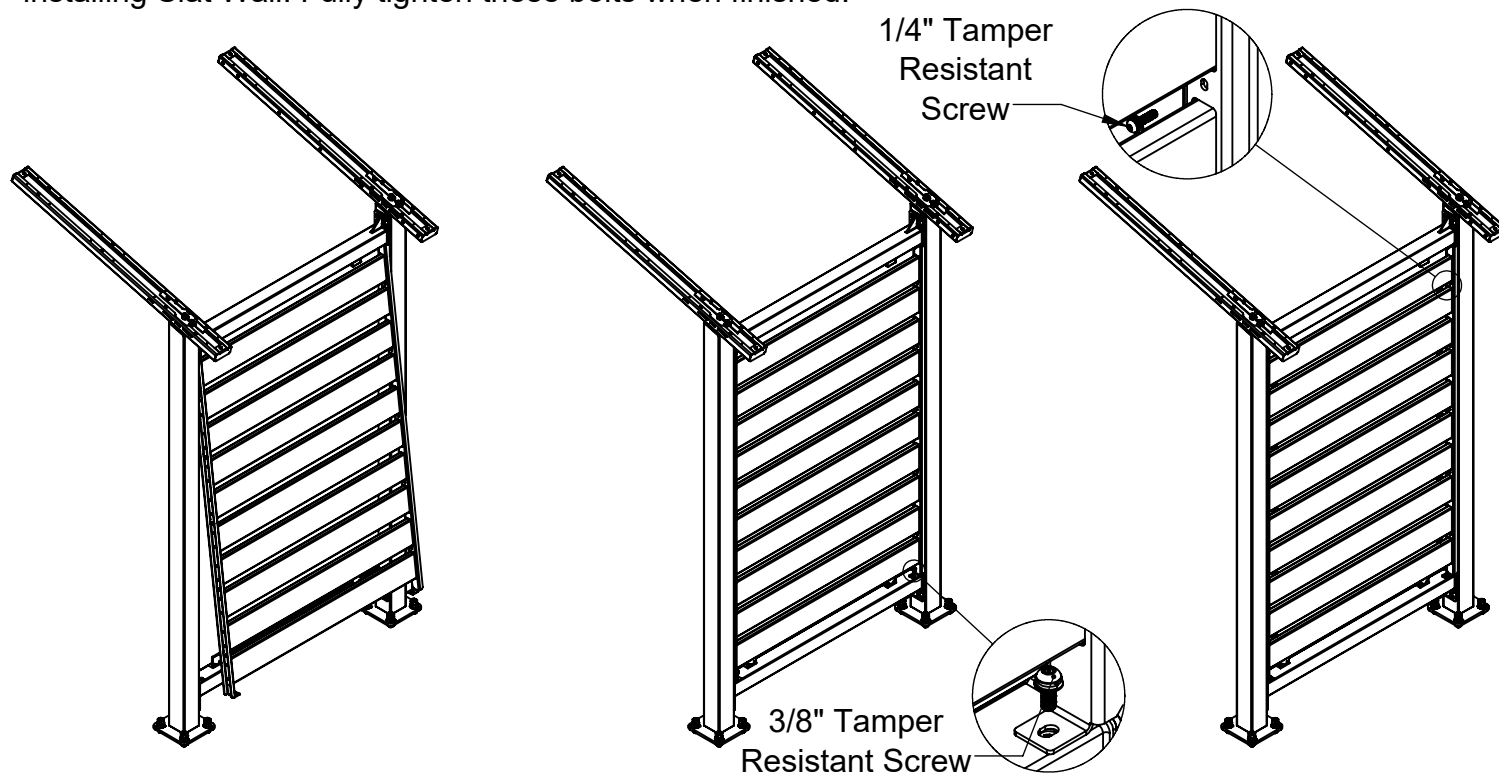
Step 6B: Install Slat Wall if applicable. Note: Crossbrace Screws may need to be adjusted when installing Slat Wall. Fully tighten these bolts when finished.



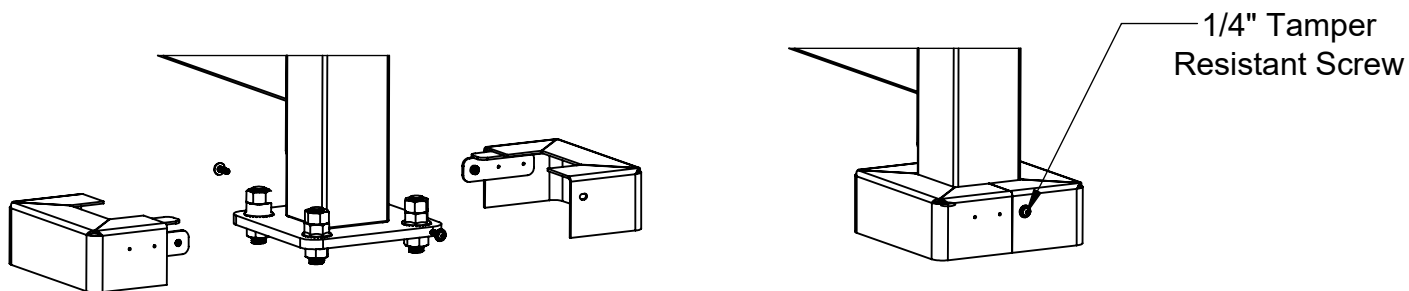Step 7: Install base enclosures as shown



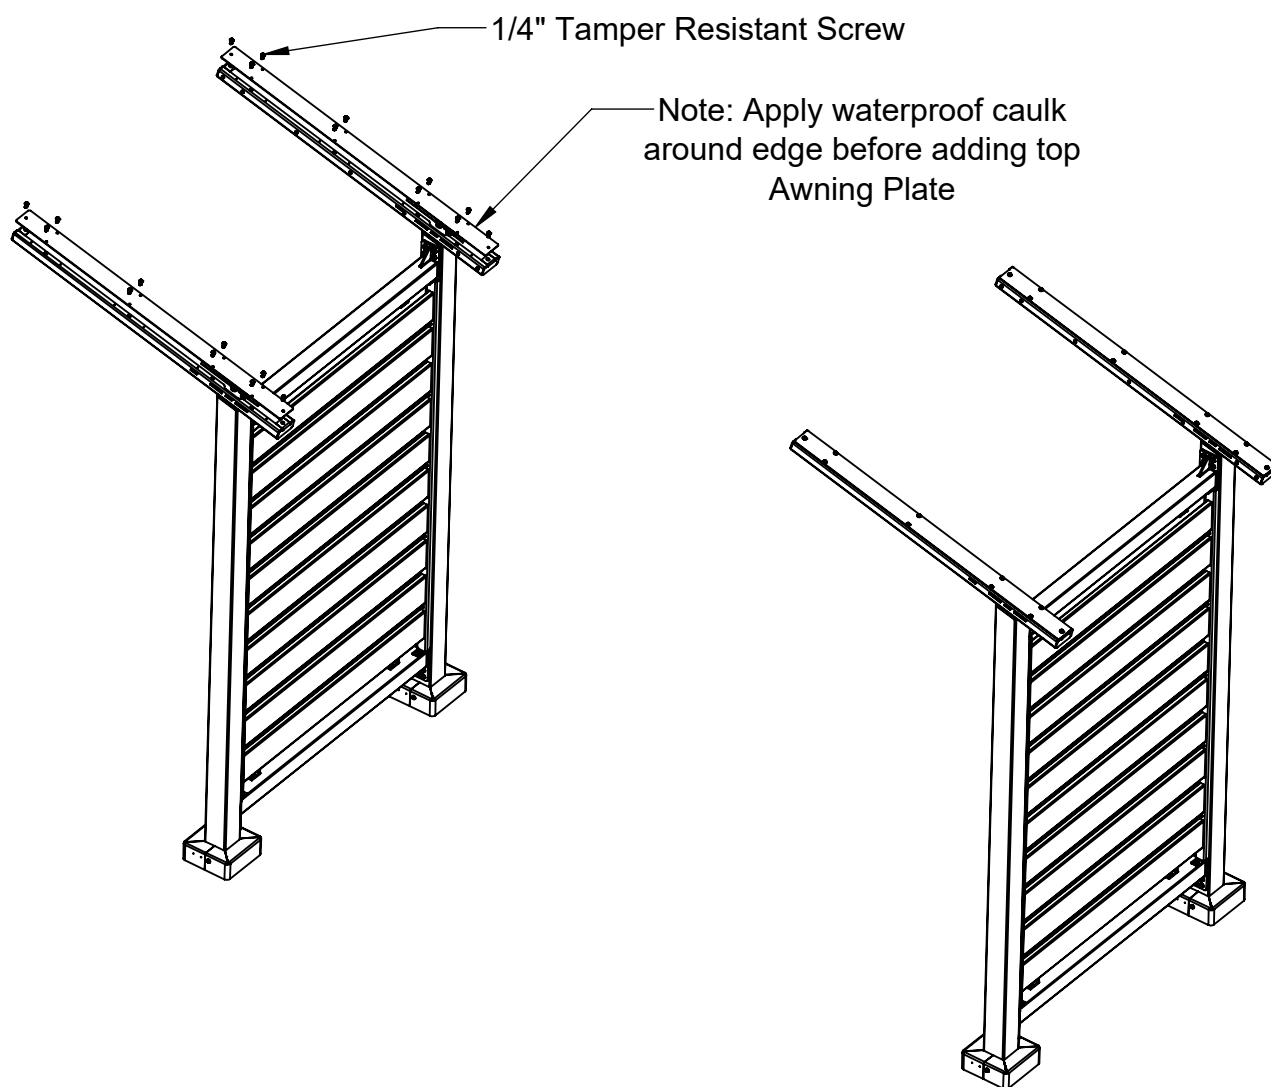Step 8: Install top Awning Plates (If Applicable)




Preserve Outdoor Collaboration / PSV1

Installation Instructions



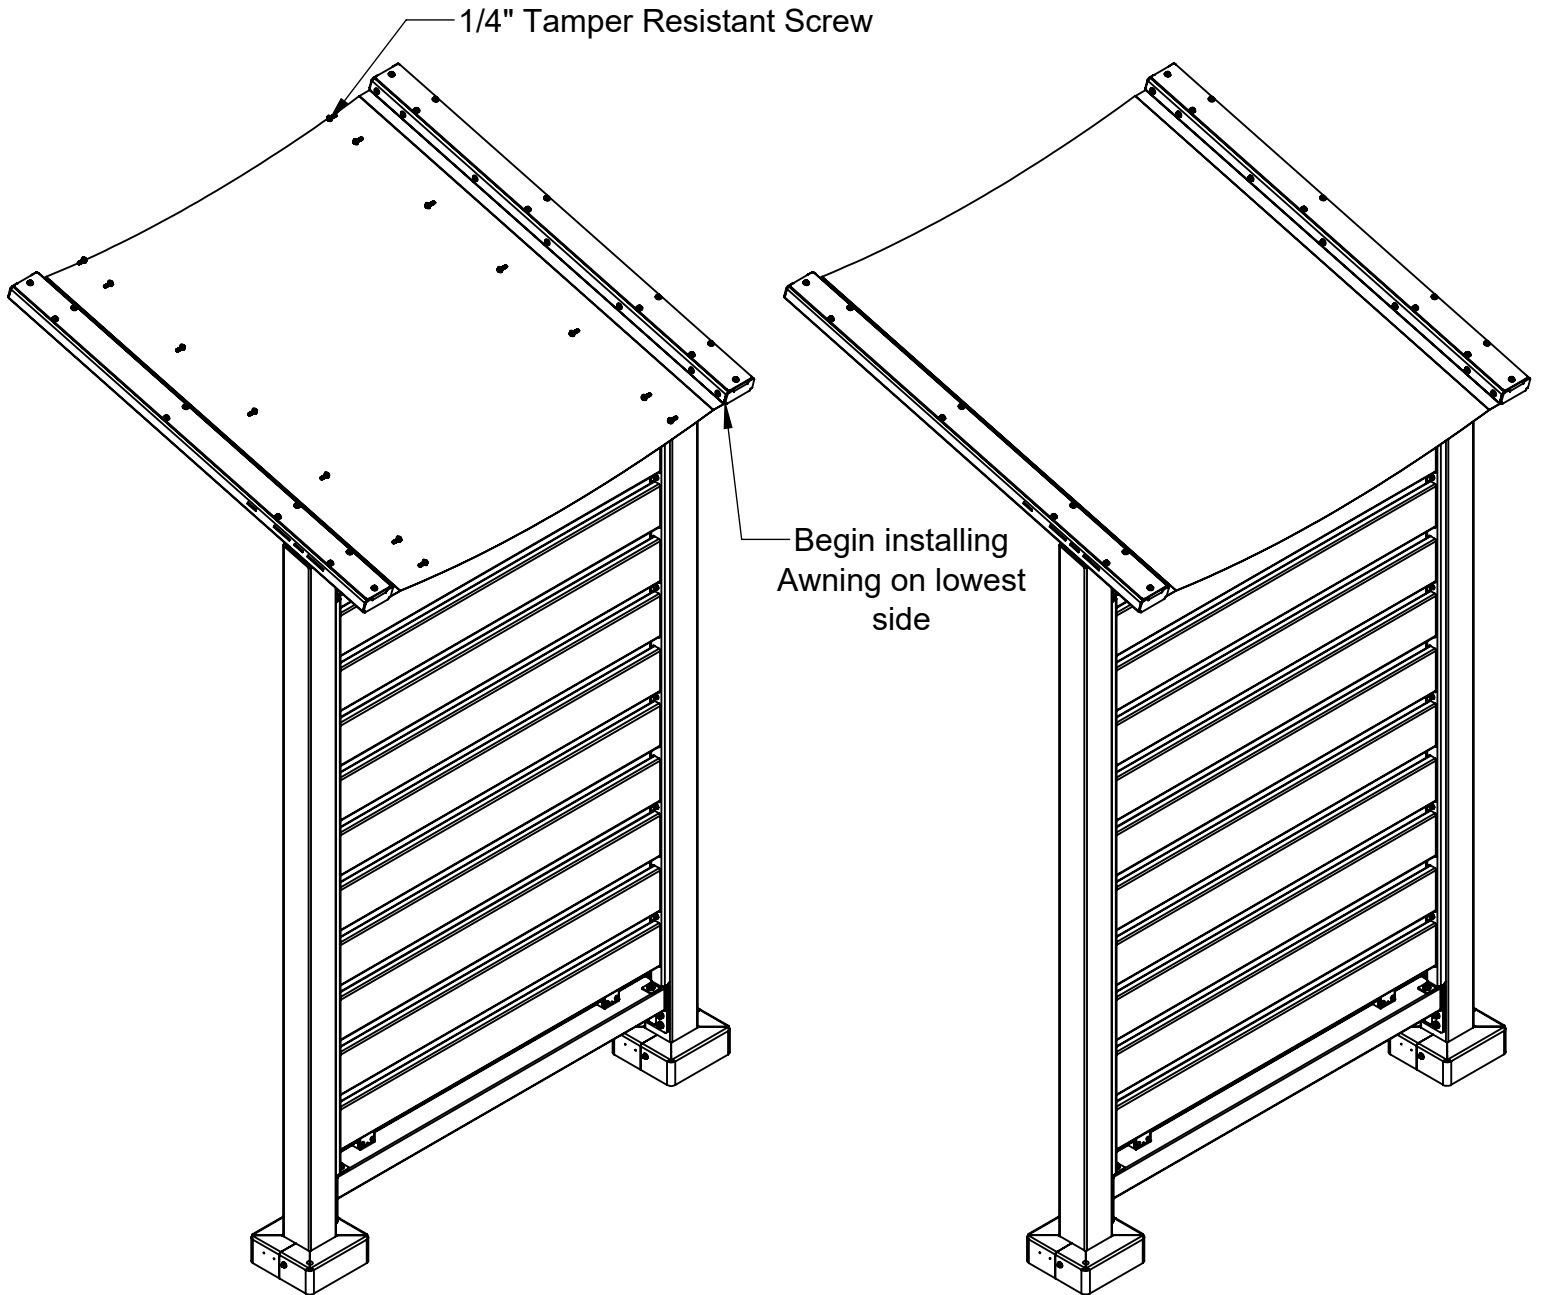Step 9: Install Awning. Begin from lowest edge of Awning Arm.




























Preserve Outdoor Collaboration / PSV2

Installation Instructions




Before assembling the Preserve Unit, follow the mounting hardware instructions provided with the unit. These instructions are specific to the install location. For any questions contact your Ghent Representative by calling (800)-543-0550 or by emailing orders@gmicompanies.com

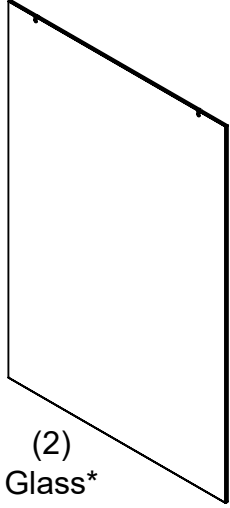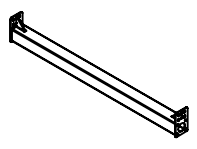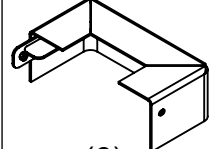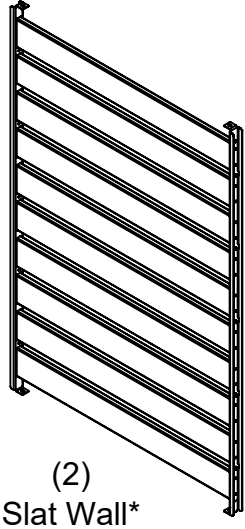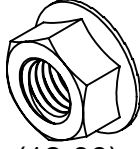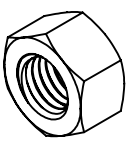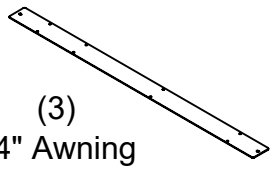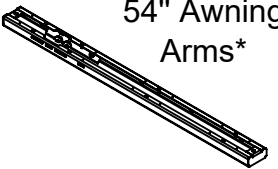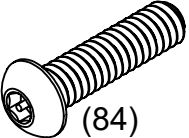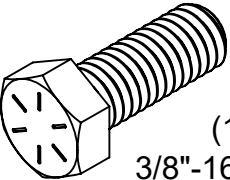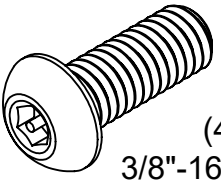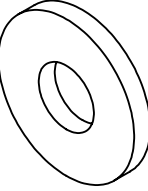Step 1: Remove and unpack the Items and Hardware.


						
(1) Side Post Left	(1) Side Post Right	(1) Side Post Center	(2) Glass*	(4) Cross Base Assembly	(6) Two Piece Cover	(2) Slat Wall*
						
(12-36) 3/4"- Flange Nut	(12-36) 3/4"- Jam Nut	(3) 54" Awning Cover Plate*	(3) 54" Awning Arms*	(8) Glass Clamp*	(4) Rubber Glazing Block*	
						
(84) 1/4"-20 Tamper Resistant Screws	(16) M5X0.8 Screw*	(12) 3/8"-16 Socket Head Screw	(48) 3/8"-16 Tamper Resistant Hex	(1) Right Angle Screwdriver		
						
(84) 1/4" Washer	(40) 3/8" Washer	(12) Black Fender Washer	(52) 3/8" Split Lock Washer	(84) 1/4" Split Lock Washer	(1) Thread Locking Adhesive	(1) Waterproof Caulk

*Depending on Material Selection

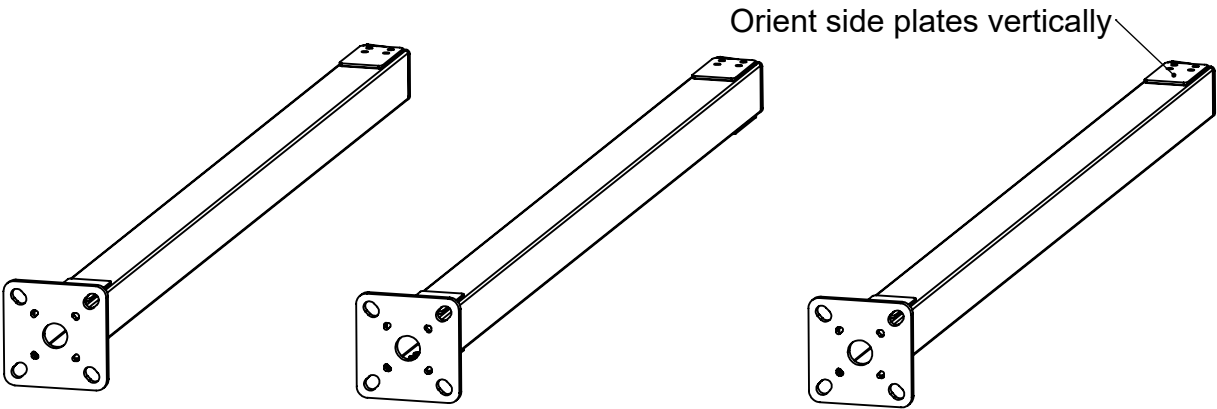
Step 2: Gently rest the Side Posts onto a clean, dry surface as shown below.



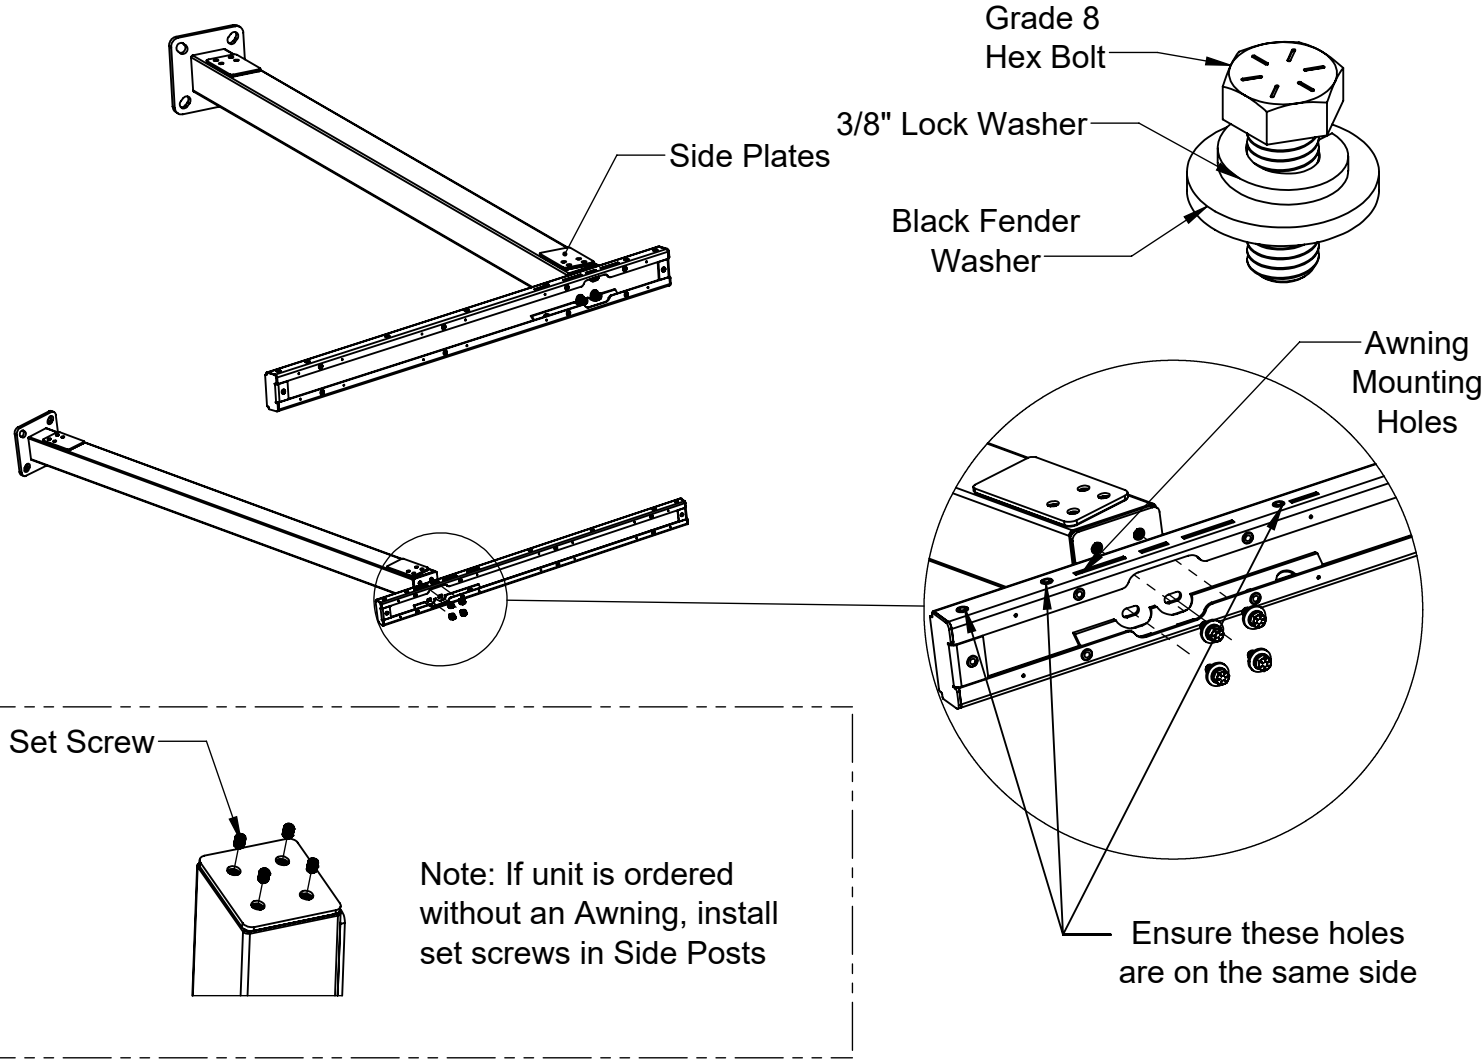
Step 3: Attach the Awning Arms onto the Side Posts as shown. Ensure that the Awning Mount holes and the Side Plates are oriented vertically.



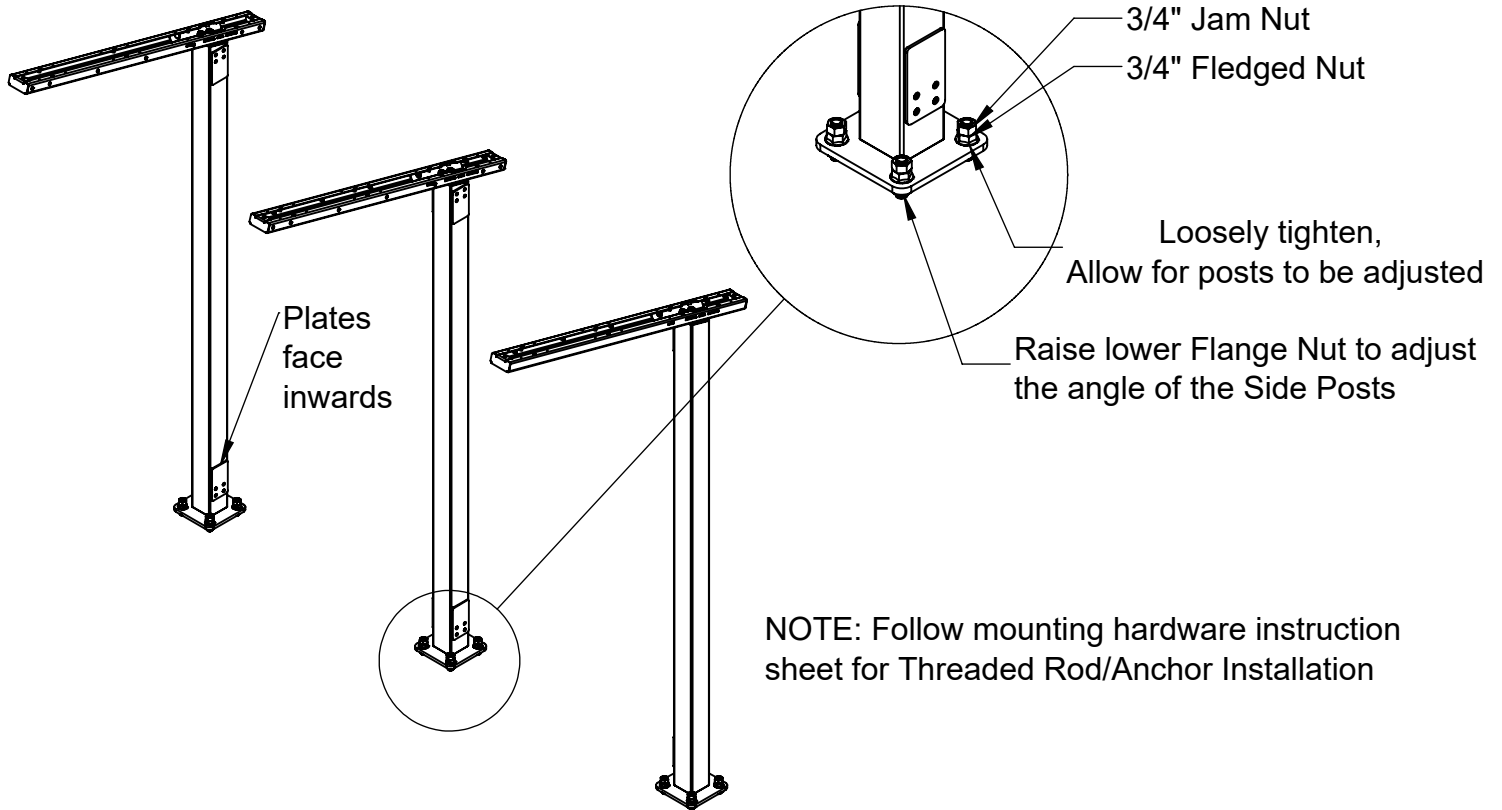
Step 4: Loosely mount the Side Posts onto the Threaded Rod / Anchors. Ensure the Side Plates are facing inwards.



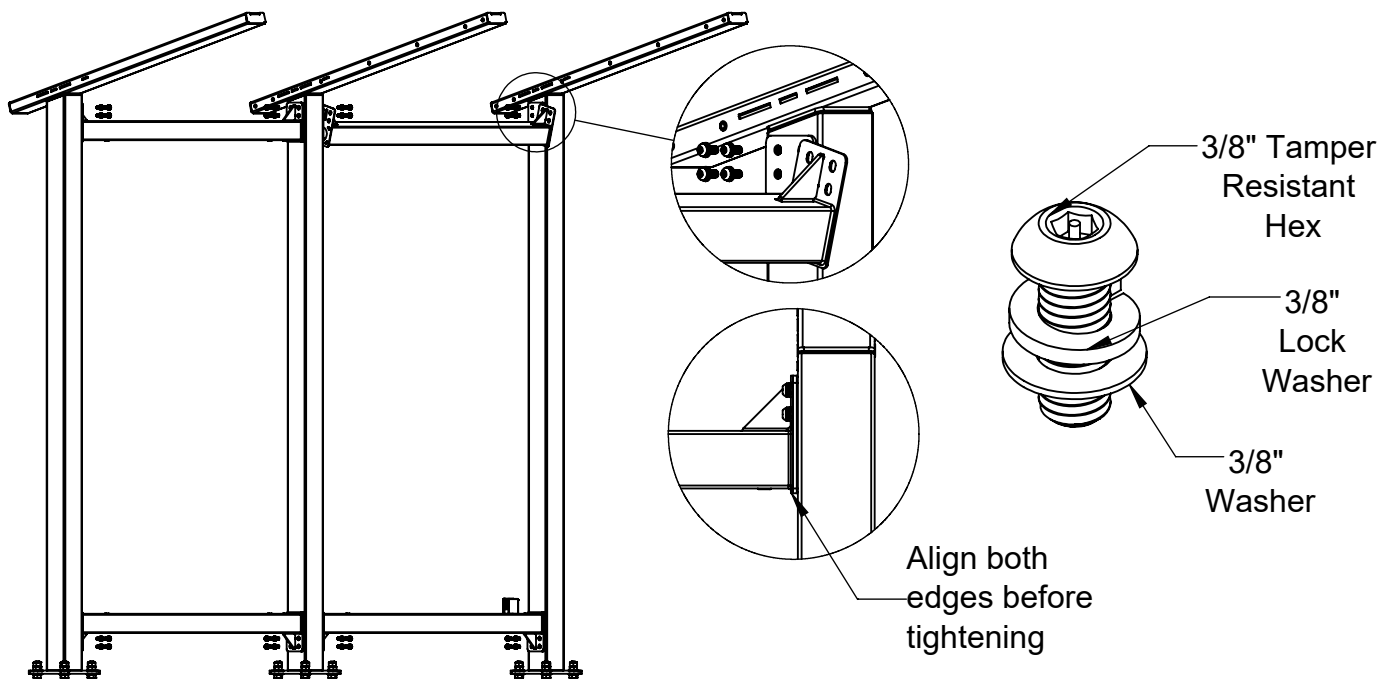
Step 5: Add the Crossbraces as shown below. Use the provided Tamper Resistant Hex bit and tool. After tightening, fully tighten 3/4" Nuts on Side Posts



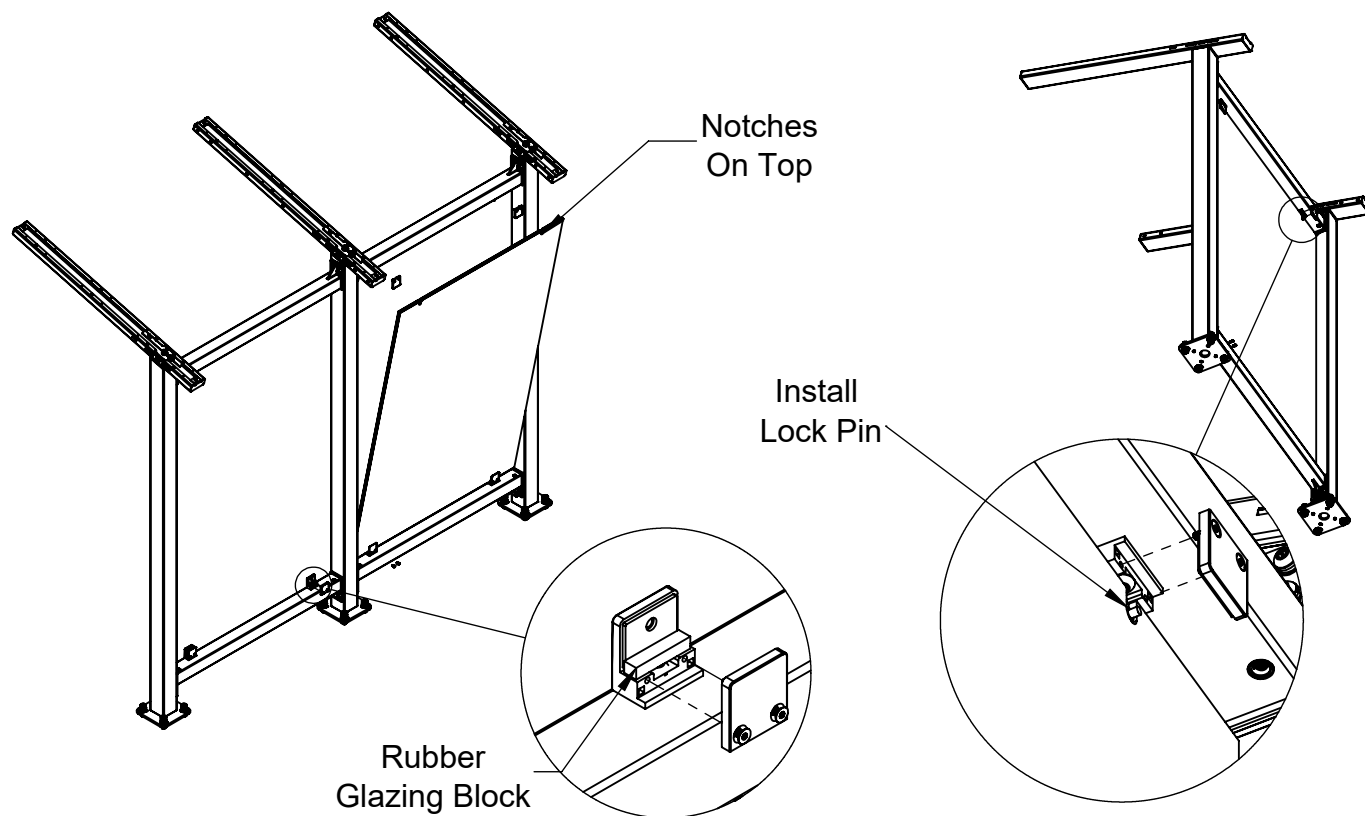
Step 6A: Install Glass if applicable. Mount Glass Clamps as shown on inner Crossbrace holes. Then install rubber glazing blocks and mount the Glassboard. Finally add the lock pins.



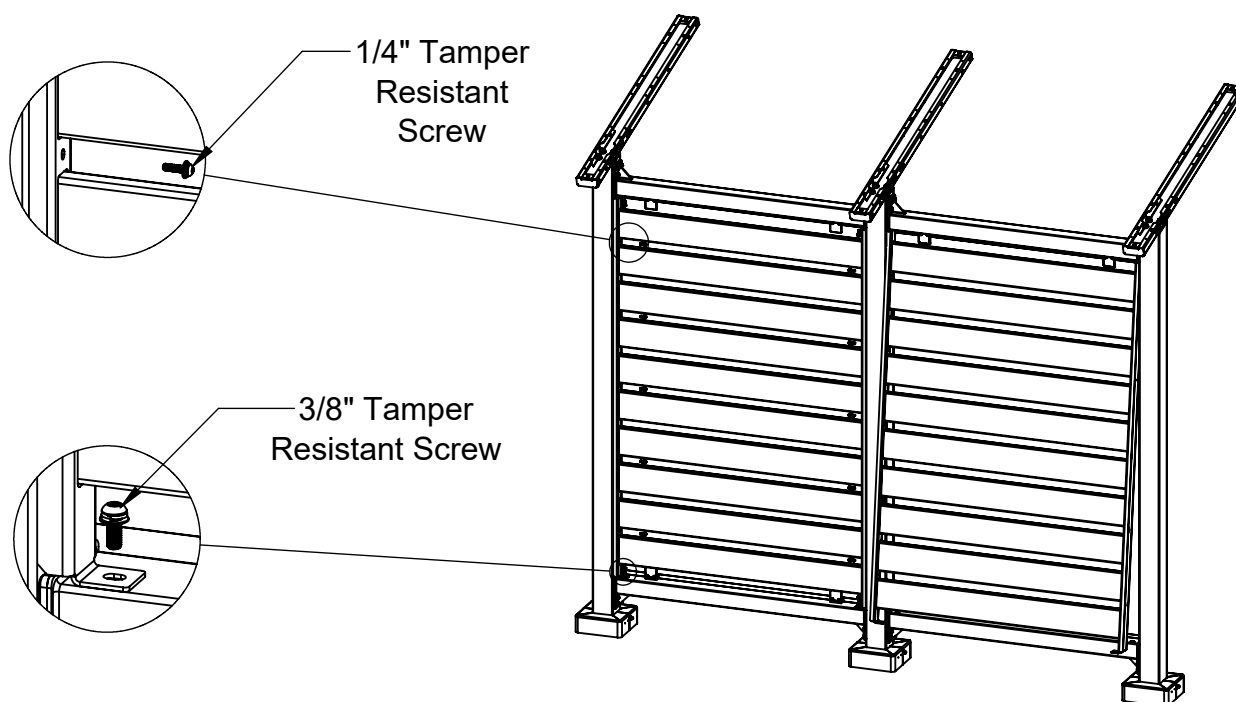
Step 6B: Install Slat Wall if applicable. Note: Crossbrace Screws may need to be adjusted when installing Slat Wall. Fully tighten these bolts when finished.



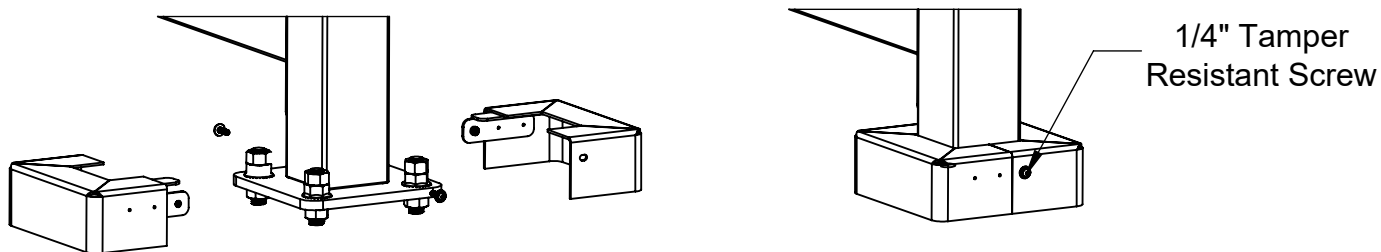Step 7: Install base enclosures as shown



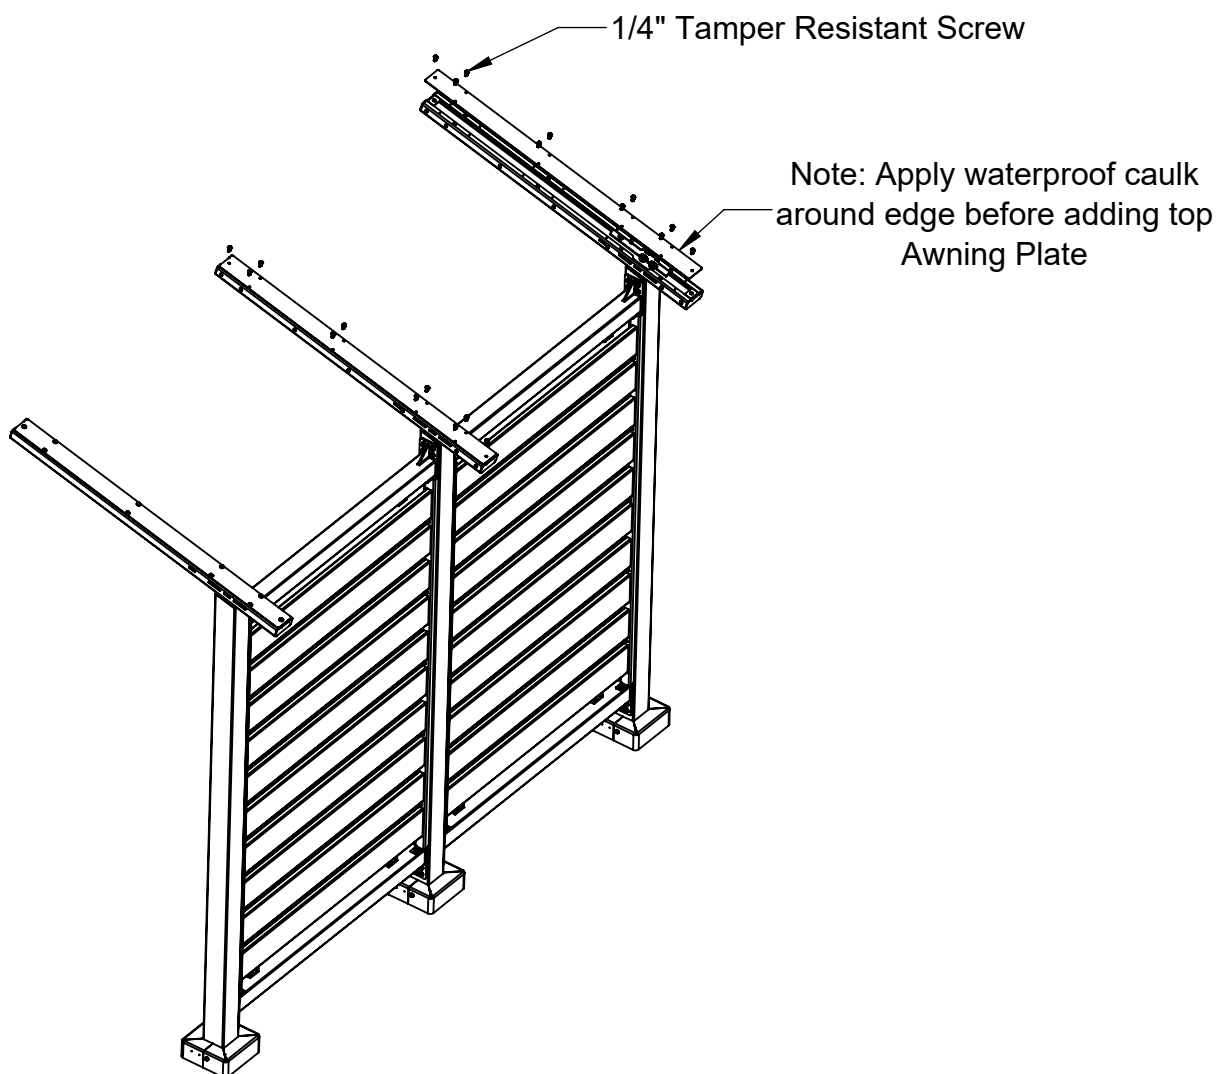Step 8: Install top Awning Plates (If Applicable)




Preserve Outdoor Collaboration / PSV2

Installation Instructions



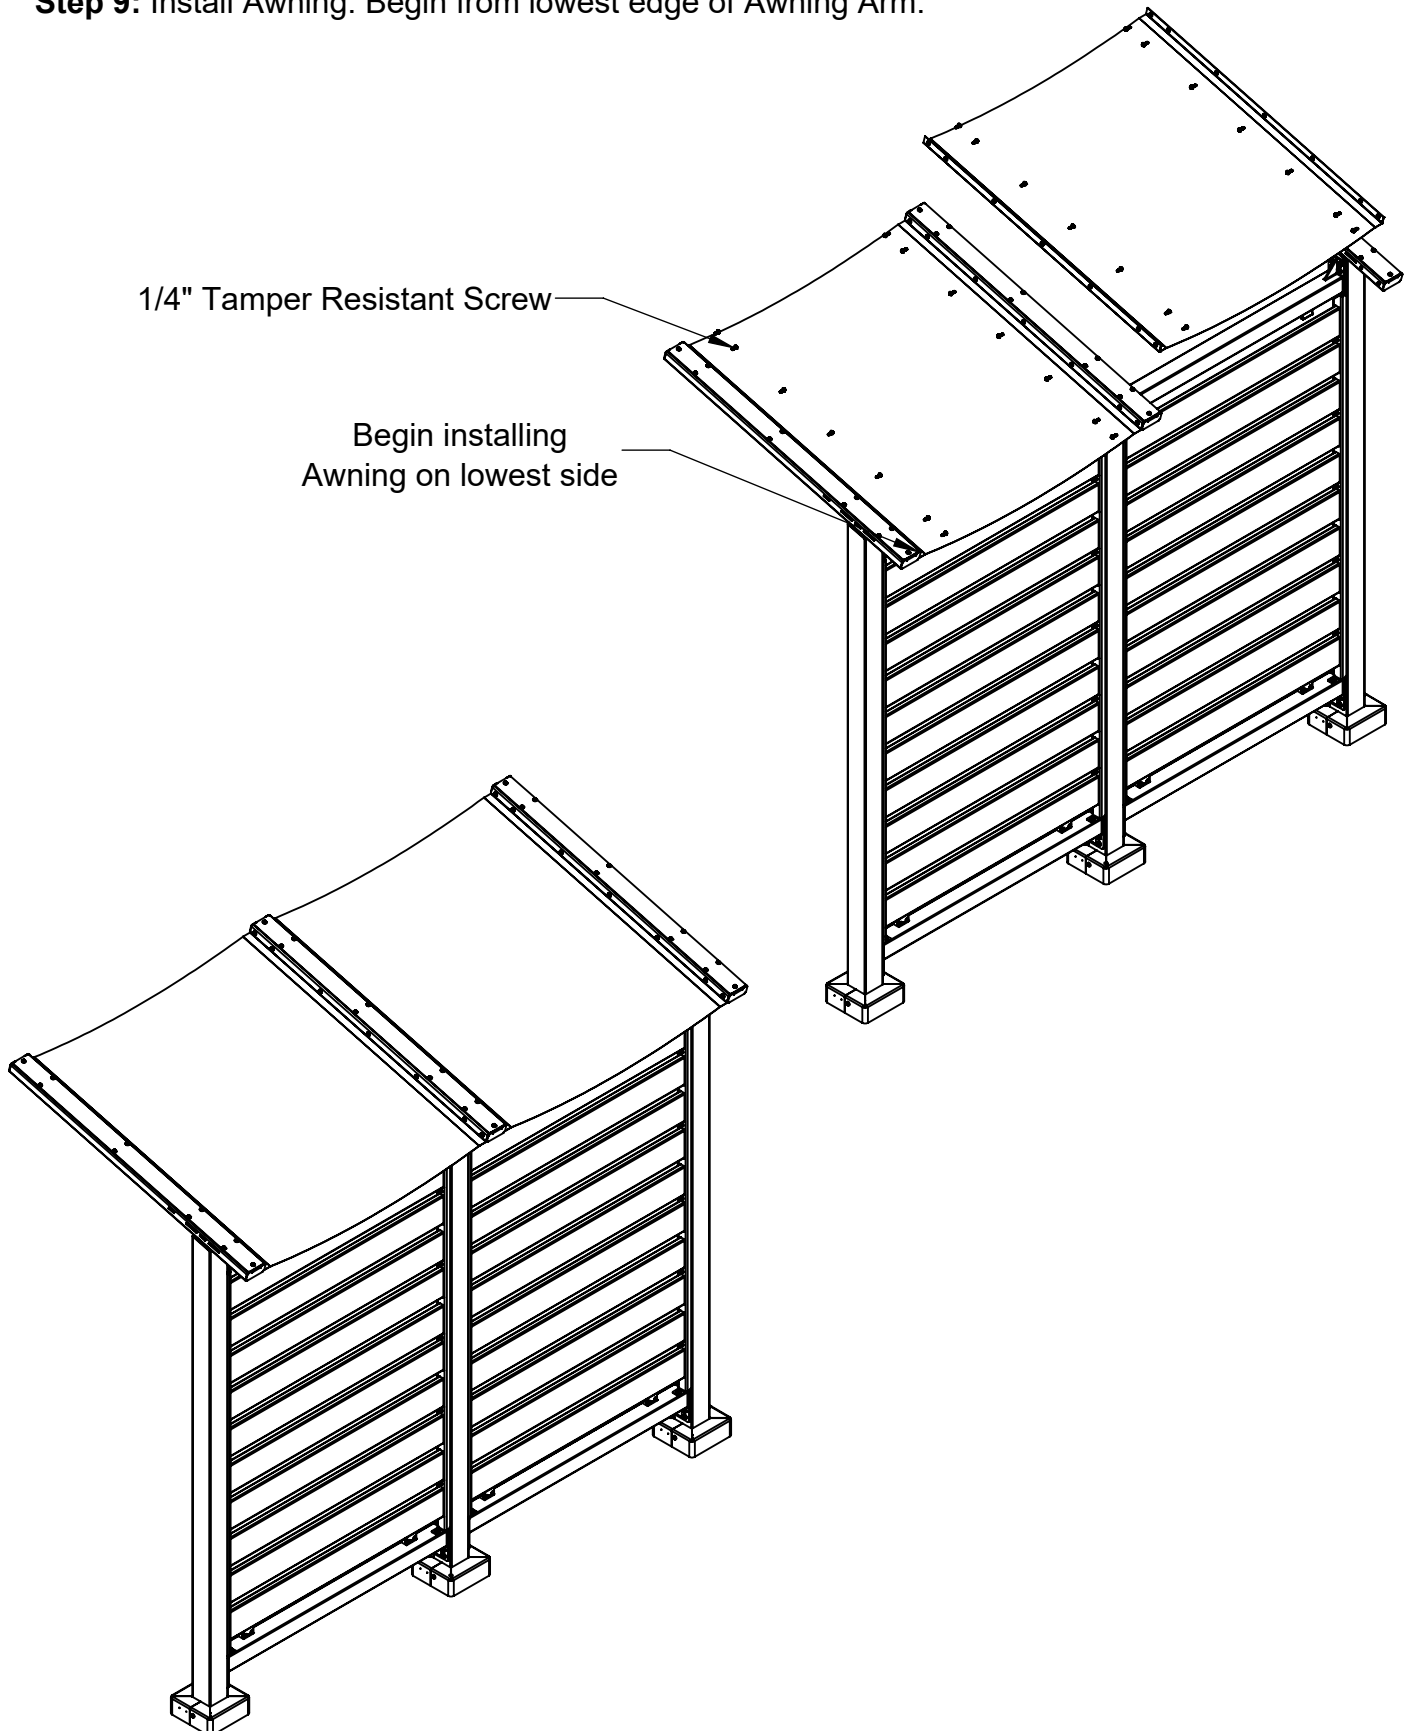Step 9: Install Awning. Begin from lowest edge of Awning Arm.





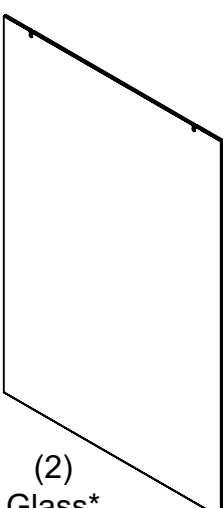

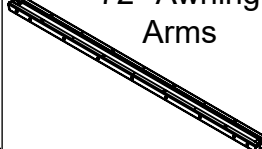
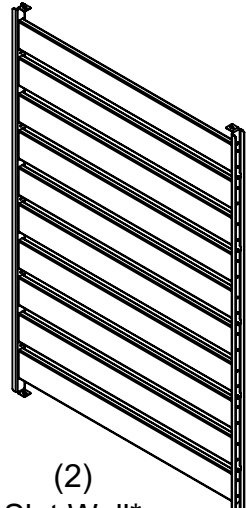
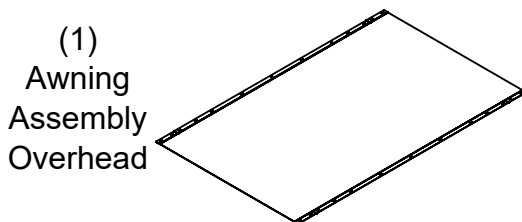



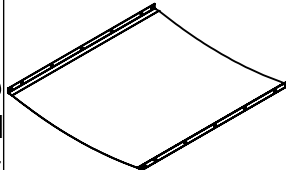
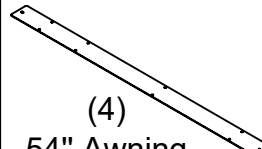
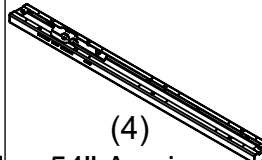
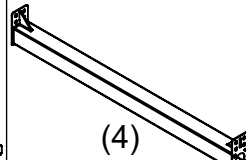
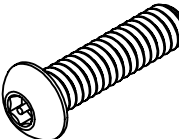


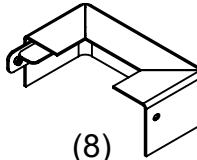









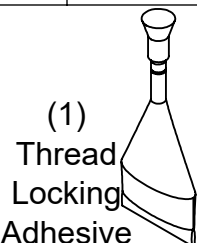

Preserve Outdoor Collaboration / PSV3

Installation Instructions




Before assembling the Preserve Unit, follow the mounting hardware instructions provided with the unit. These instructions are specific to the install location. For any questions contact your Ghent Representative by calling (800)-543-0550 or by emailing orders@gmicompanies.com

Step 1: Remove and unpack the Items and Hardware.


						
(2) Side Post Left	(2) Side Post Right	(2) Glass*	(4) 72" Awning Cover Plate	(2) 72" Awning Arms	(2) Slat Wall*	
						
			(1) Awning Assembly Overhead			
						
(8) Glass Clamp*	(4) Rubber Glazing Block*	(4) Angled Alignment Mount	(2) Awning Assembly Side	(4) 54" Awning Cover Plate	(4) 54" Awning Arms	(4) Cross Base Assembly
						
(134) 1/4"-20 Tamper Resistant Screw	(48) 3/8"-16 Tamper Resistant Screw	(16) 3/8"-16 Socket Head Screw	(8) Two Piece Cover	(16-32) 1/4"- Flange Nut	(16-48) 1/4"- Jam Nut	(1) Right Angle Screwdriver
						
(16) M5X0.8 Screw*	(134) 1/4" Washer	(40) 3/8" Washer	(16) Black Fender Washer	(56) 3/8" Split Lock Washer	(134) 1/4" Split Lock Washer	(1) Thread Locking Adhesive
						
						(1) Waterproof Caulk

*Depending on Material Selection

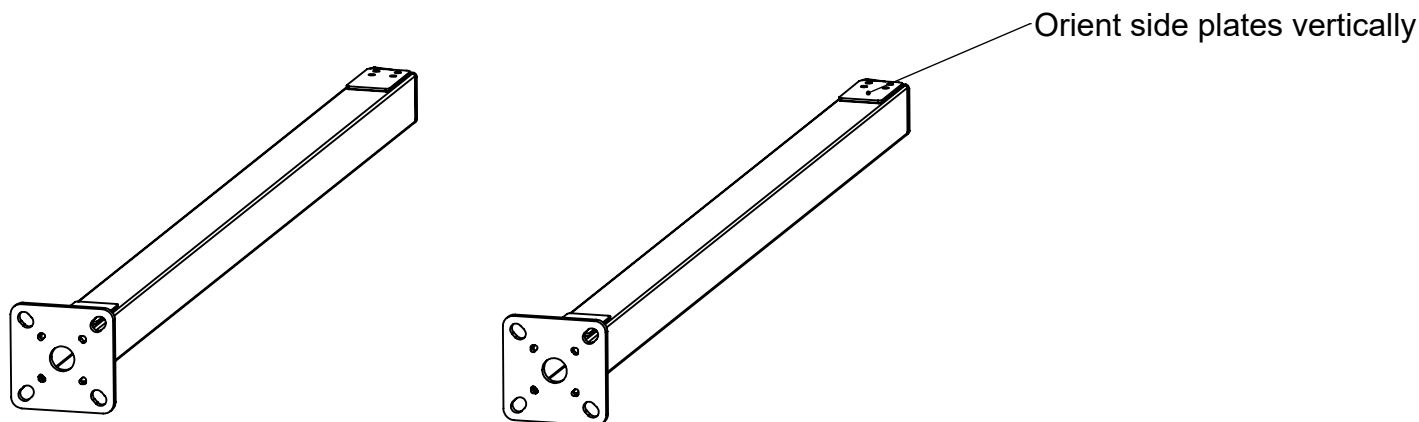
Step 2: Gently rest the Side Posts onto a clean, dry surface as shown below.



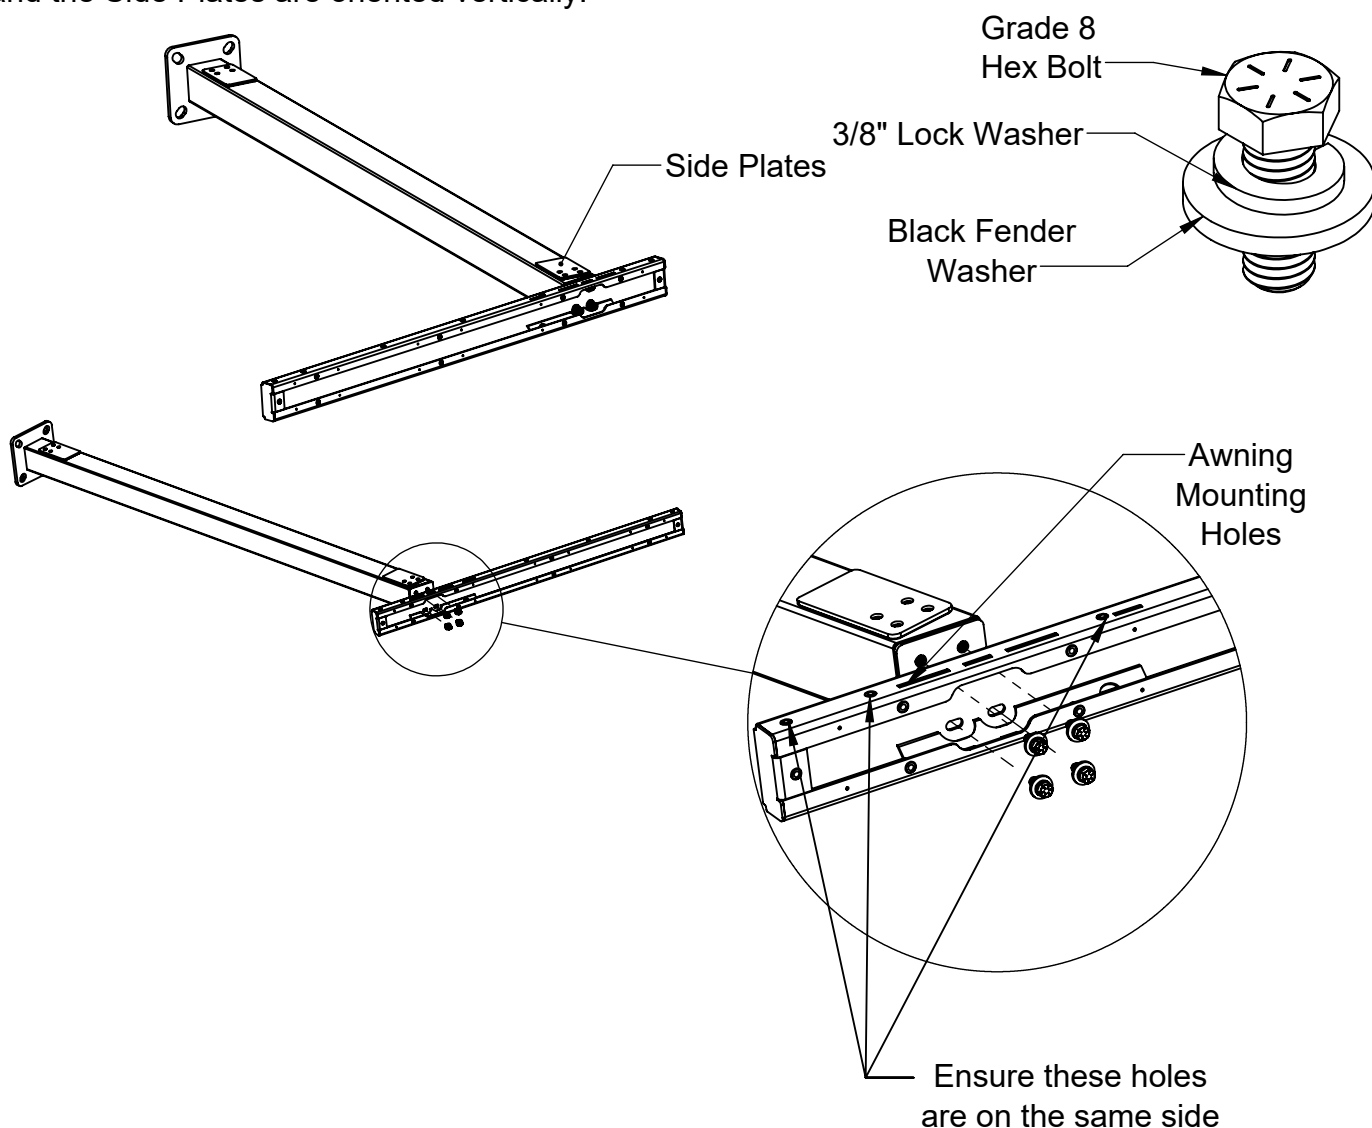
Step 3: Attach the Awning Arms onto the Side Posts as shown. Ensure that the Awning Mount holes and the Side Plates are oriented vertically.



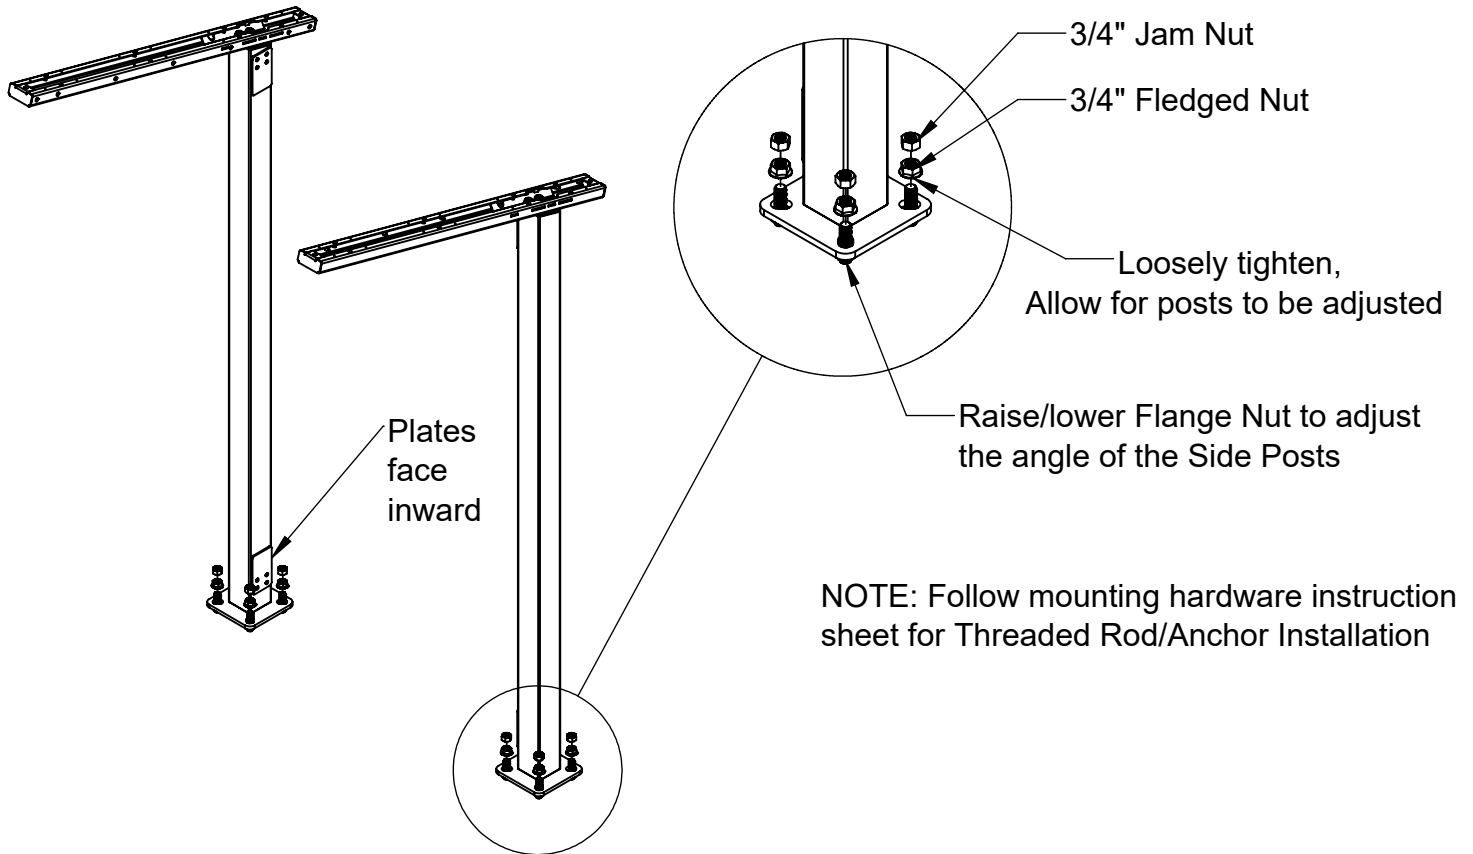
Step 4: Loosely mount the Side Posts onto the Threaded Rod / Anchors. Ensure the Side Plates are facing inwards.



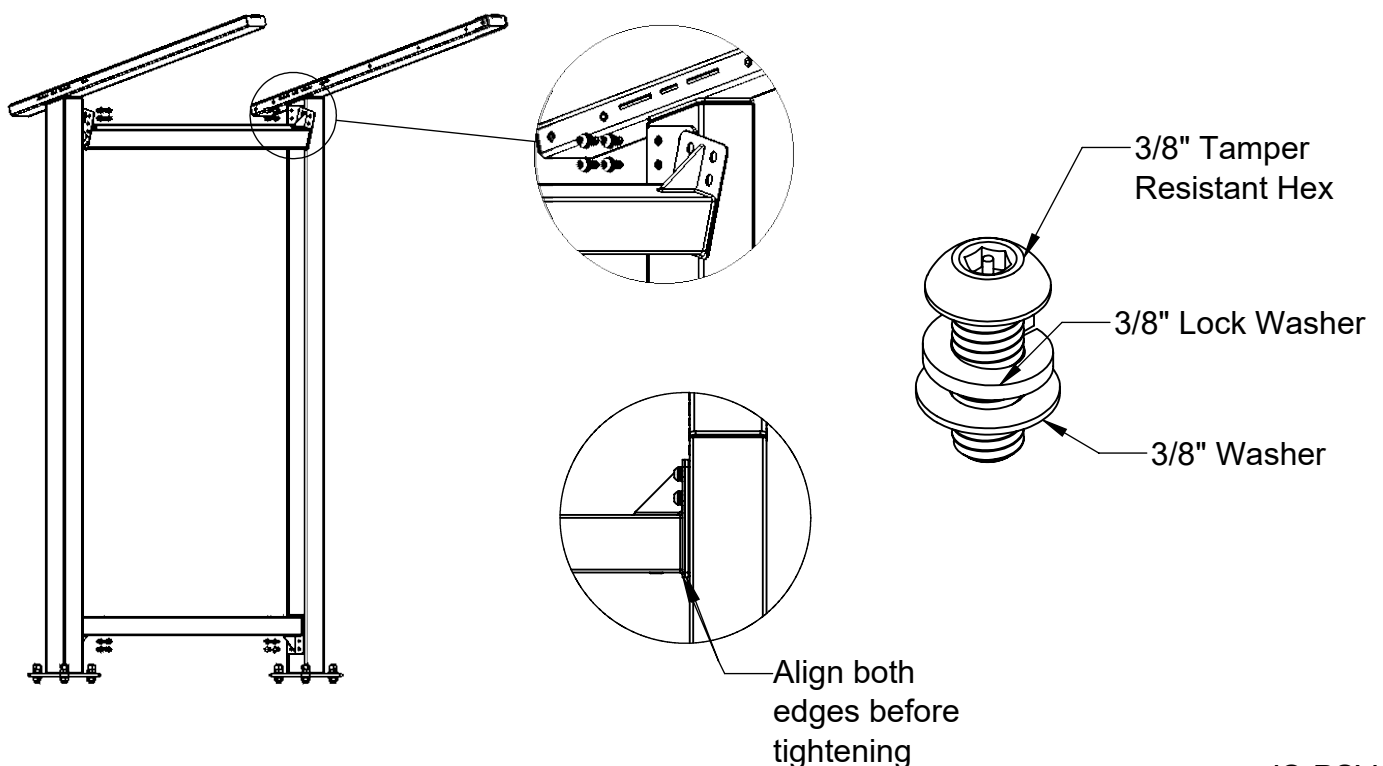
Step 5: Add the Crossbraces as shown below. Use the provided Tamper Resistant Hex bit and tool. After tightening, fully tighten 3/4" Nuts on Side Posts



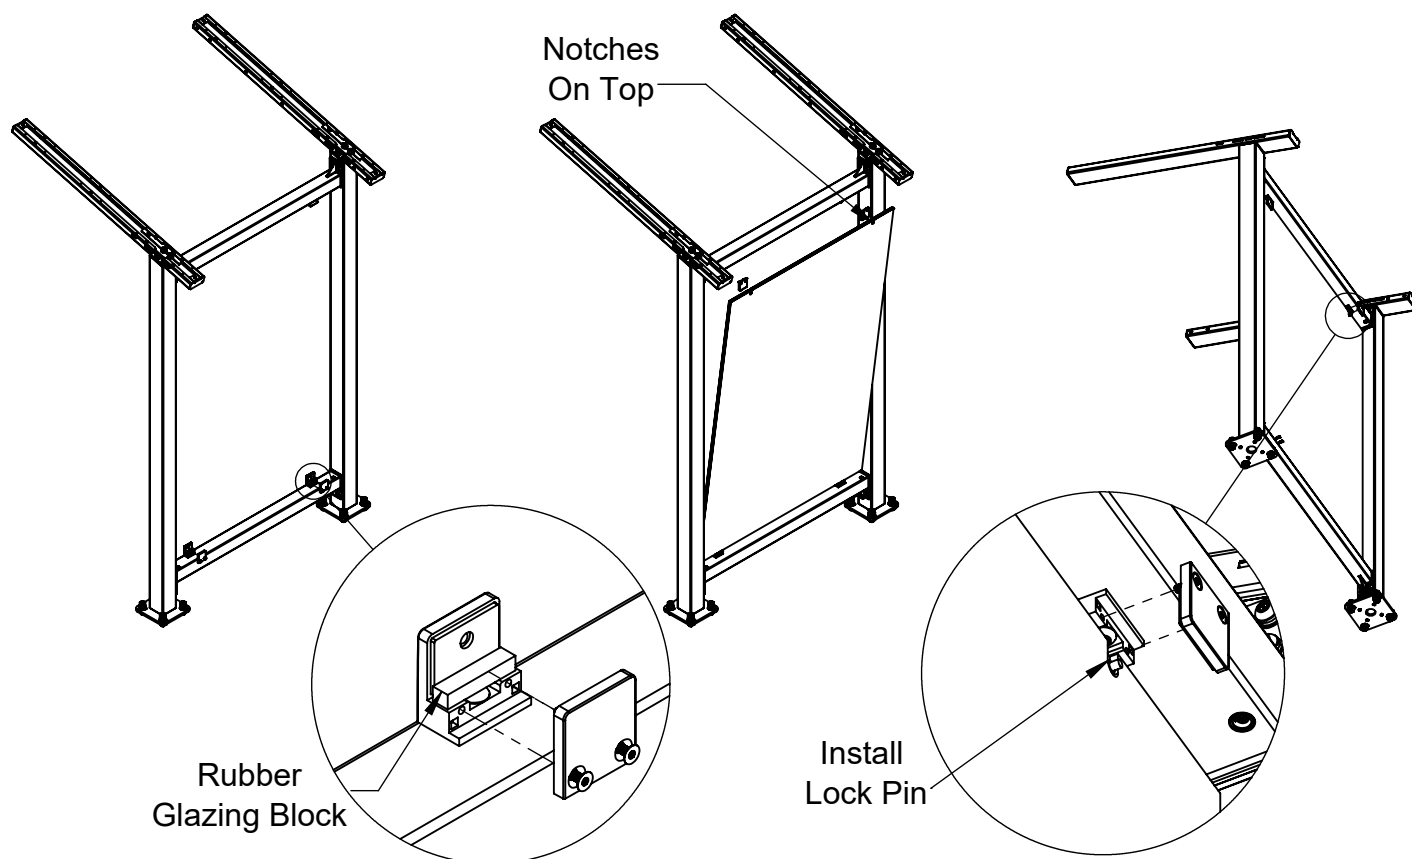
Step 6A: Install Glass if applicable. Mount Glass Clamps as shown on inner Crossbrace holes. Then install rubber glazing blocks and mount the Glassboard. Finally add the lock pins.



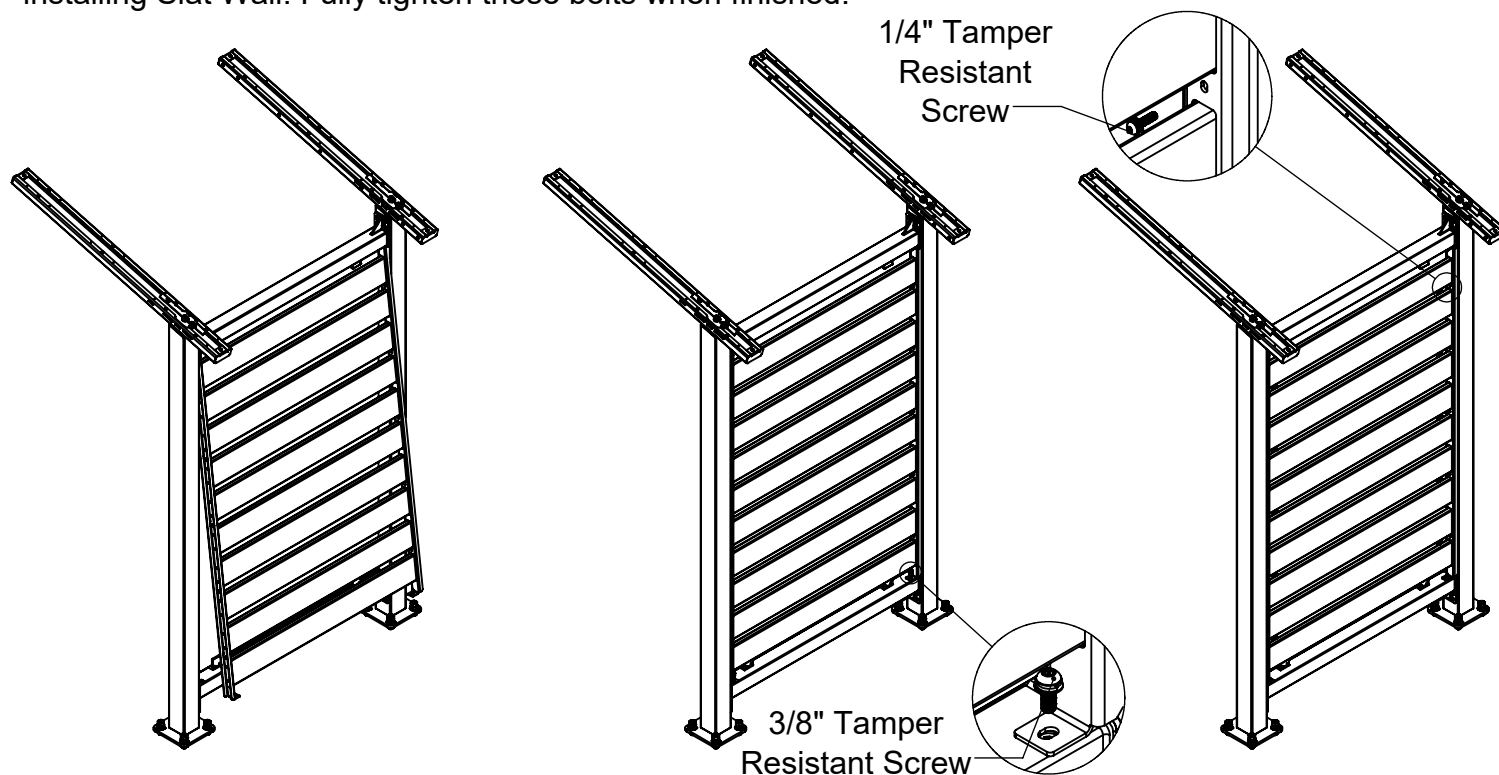
Step 6B: Install Slat Wall if applicable. Note: Crossbrace Screws may need to be adjusted when installing Slat Wall. Fully tighten these bolts when finished.



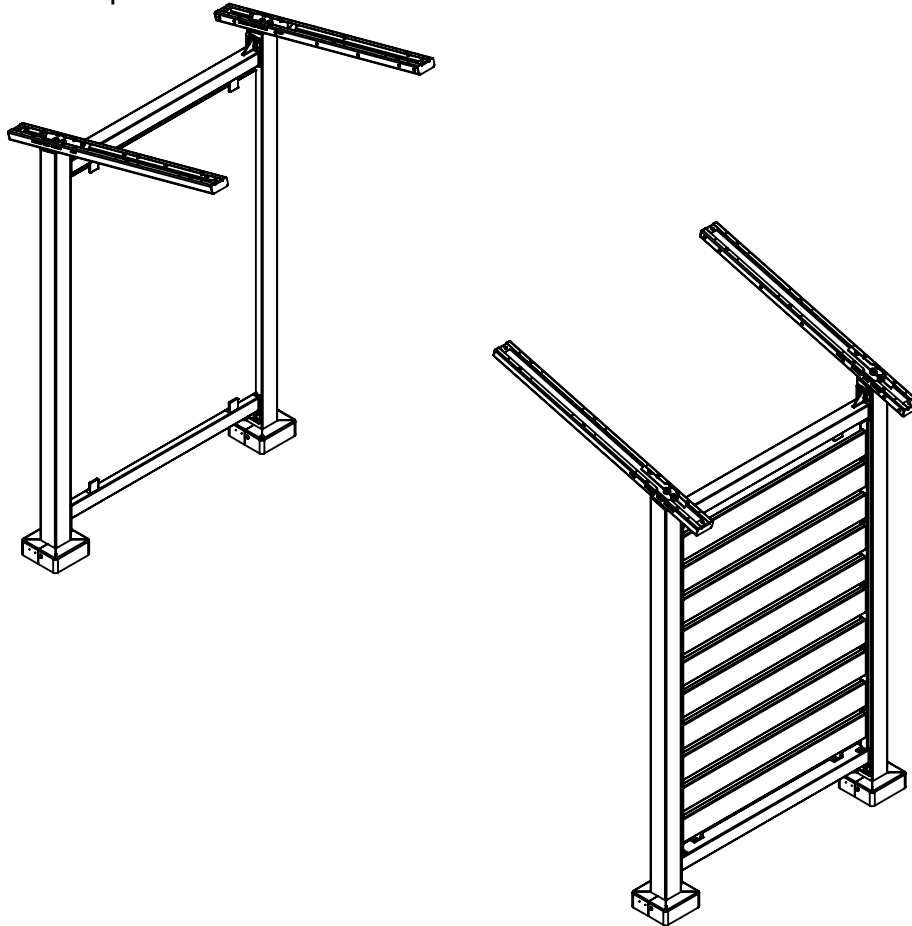
Step 7: Repeat steps 2 through 6 for second unit. Ensure mounting guide has been followed correctly to properly space units apart.



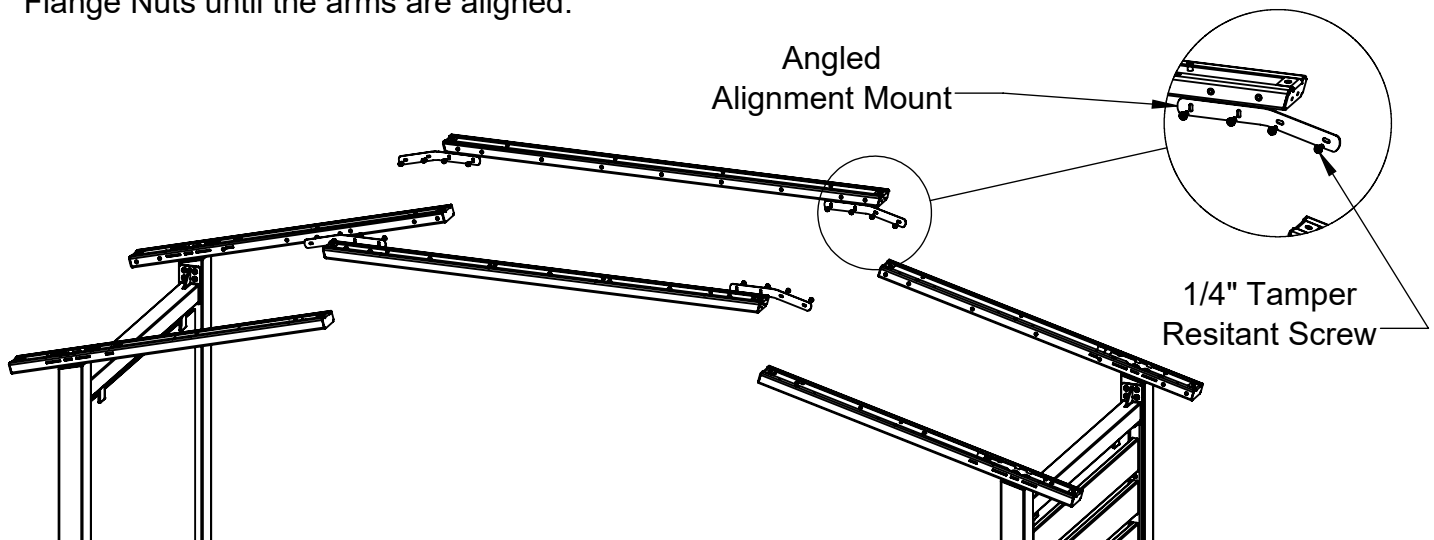
Step 8: Install 72" Awning Arms. Ensure the 72" Awning Arms are above 54" Awning Arms. Use Angled Alignment Mounts. If Top Awning Arms do not align, adjust the Side Awning Arms where they meet the Side Posts until aligned. If this is not sufficient, refer to Step 4 and adjust the underneath Flange Nuts until the arms are aligned.



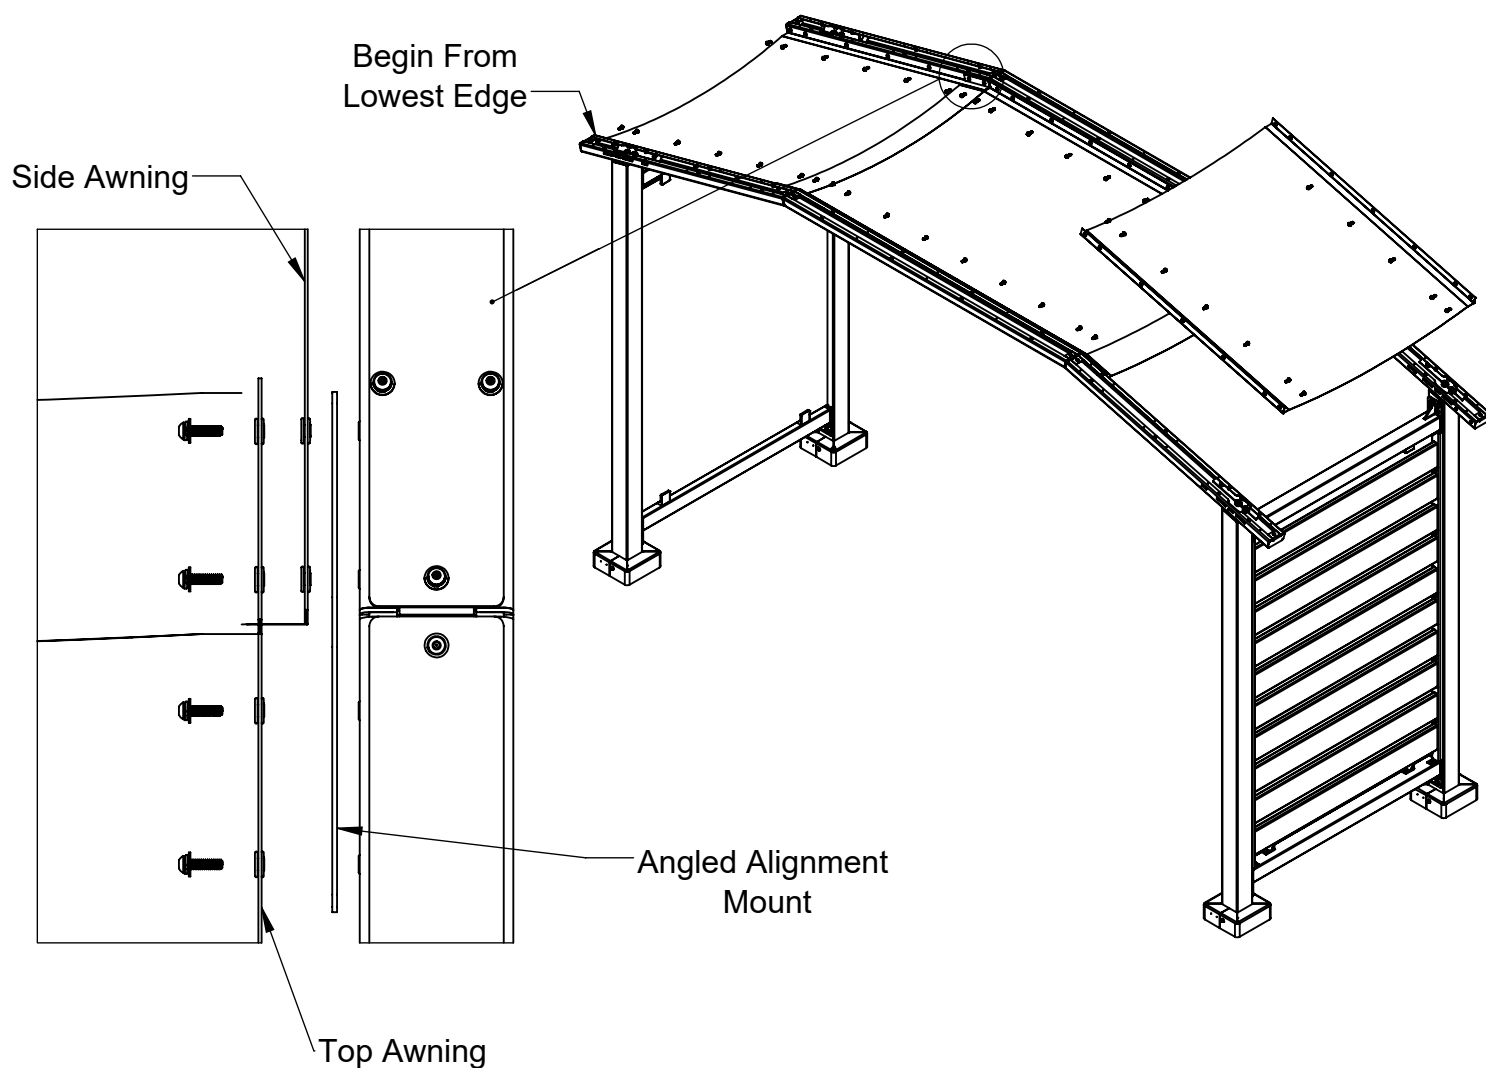
Step 9: Install Side Awnings then Top Awning. Begin from lowest edge of Awning Arms.



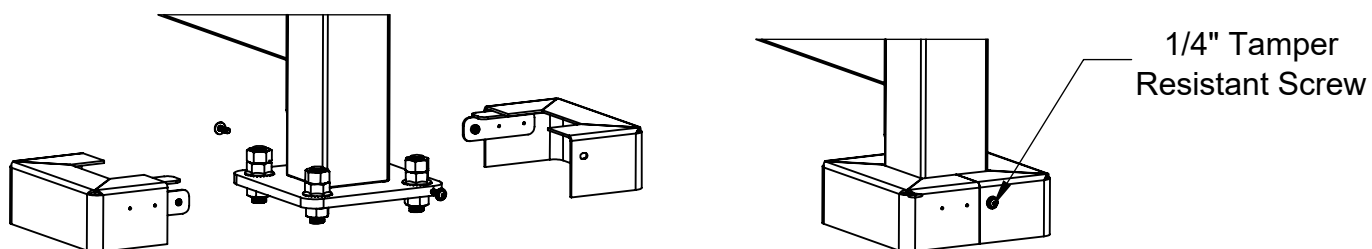Step 10: Install base enclosures as shown.



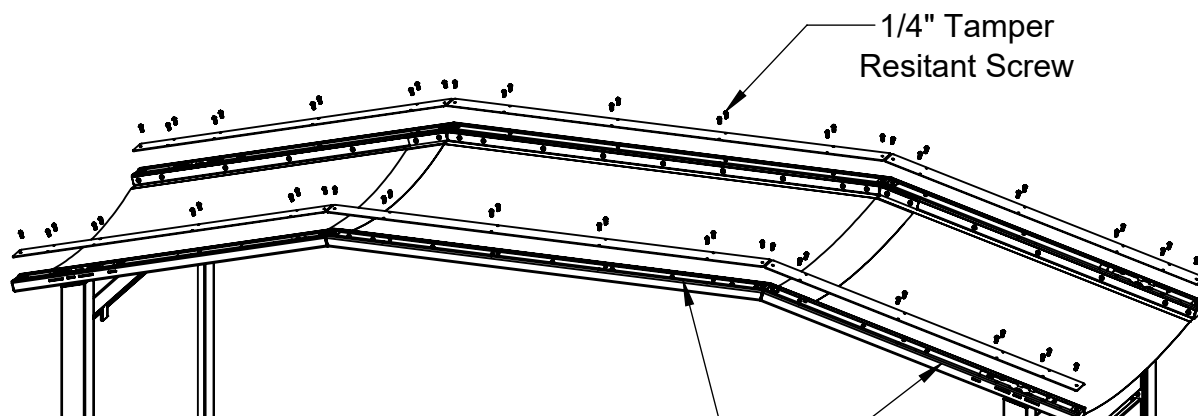Step 11: Install Awning Plates.



Note: Apply waterproof caulk around edge before adding top Awning Plate

