

Flyte Solo Frameless Whiteboard / FLYS

Installation Instructions

Questions? Give us a call! 800-543-0550

NOTE: Immediately after delivery, carefully open carton(s) and inspect for concealed damage. Save carton(s) and packing materials for future use. If concealed damage is found, notify the carrier immediately to request an inspection. Failure to report shipping damage in a timely manner will result in the denial of a damage claim. Return to the original packaging to protect the product.


NOTE: Failure to follow the installation instructions will void warranty. Altering the quantity of magnets or cleats will void warranty. Refer to www.ghent.com/warranties for additional details.

Tools Needed:


- Tape measure
- Level (6' recommended)
- Drill with #2 Phillips drive
- 1/4" Drill bit
- Stud finder (recommended)
- Laser level (recommended)
- Mallet
- Pencil
- Clean cloth
- Hand roller

Installation Time: One person up to five minutes to install mounting hardware. One/two persons for board positioning.

Packaging Contents:

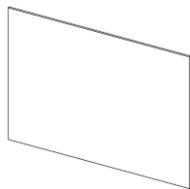


Flyte Solo

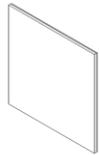


Magnets



Fasteners & Anchors

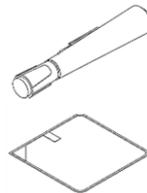


Markers & Cloth Eraser

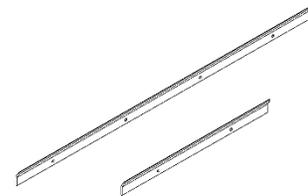


Aluminum Mounting Cleat

Instructions:


1. Check wall for flatness using level. Circle all high spots in pencil.
2. Using a pencil or laser level, trace a horizontal line, on the wall, **3-3/4" below** the top edge of the board for either a portrait or landscape layout.

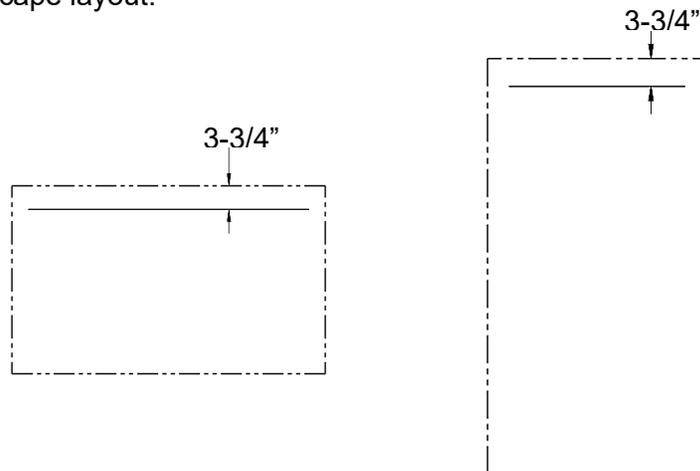


- Center the cleat on the wall flush with the traced line and mark all mounting holes as shown.

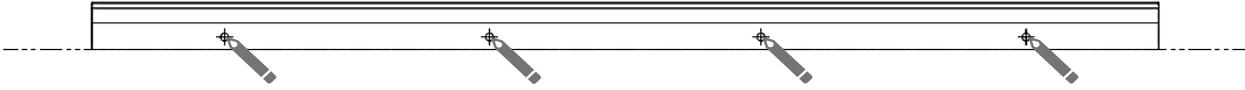


- At each location drill a 1/4" hole and install drywall anchors, unless directly in front of a wood stud.
- Install the cleat with its flanged edge pointing up and away from the wall.

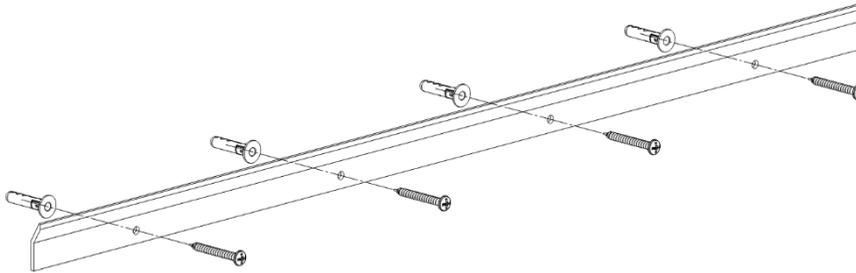

- Remove the protective film from the cleated side of the board. Stack two magnets as shown and adhere onto both bottom corners. The magnets should slide vertically but not horizontally.

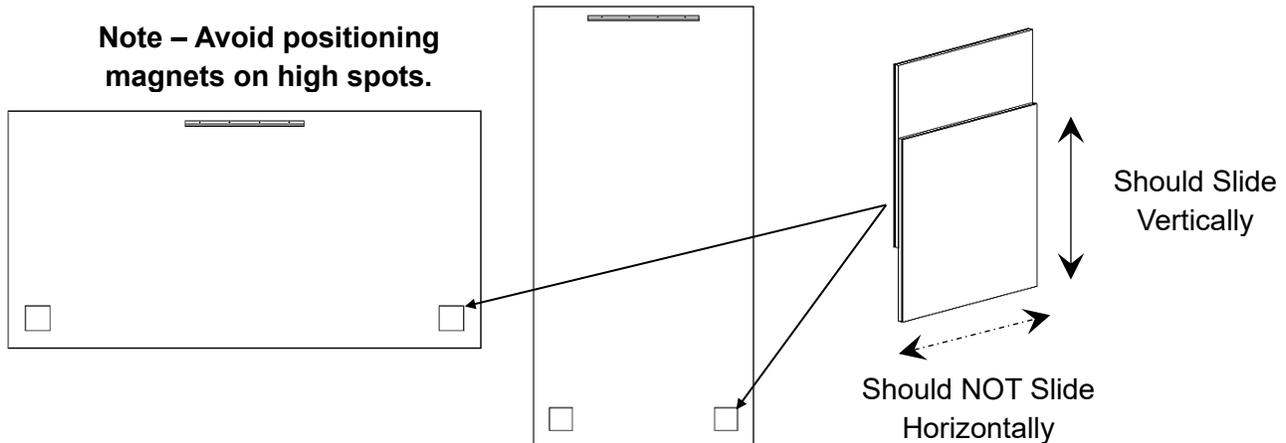

- Hook the Flyte Solo onto cleat. Hold at an angle and remove the rear adhesive liner on the magnets. Gently lower the board to the wall and press firmly at both magnet stacks to secure contact with the wall.

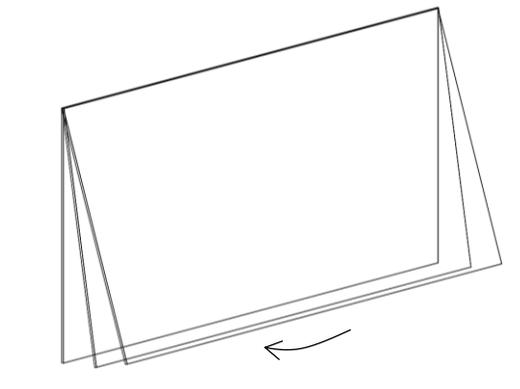

- Please recycle all packaging.